

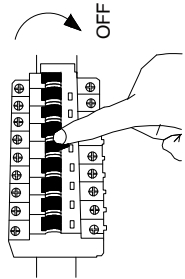
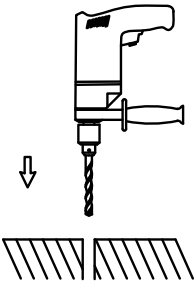
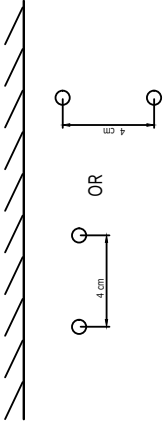
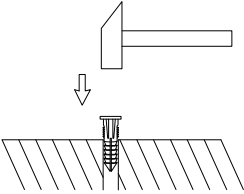
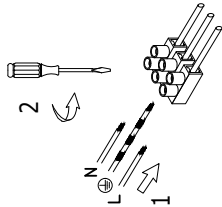
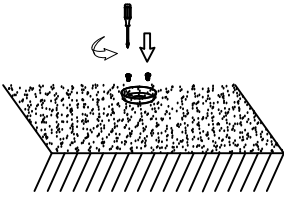
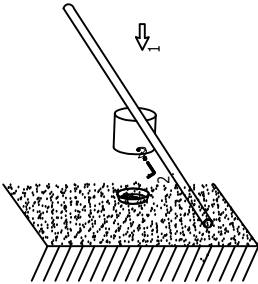


NOVA LUCE

9081102, 9081103

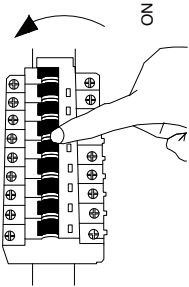

1  Turn off the general switch	2  Make a 0.6 cm CutOut	3  Make holes into desirable positions
4  Apply plastic anchors	5  Connect the wires	6  Tie up screws into place
7  Fix product into place by applying side screws	8  Turn on the general switch	