



NOVA LUCE


9088114

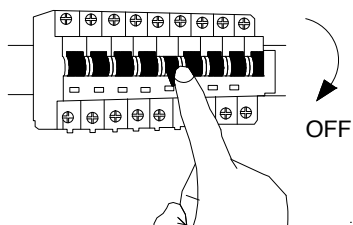


1. Turn off the general Switch

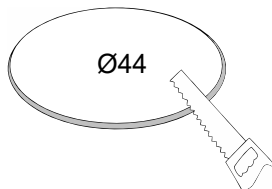


2. Make a cut out

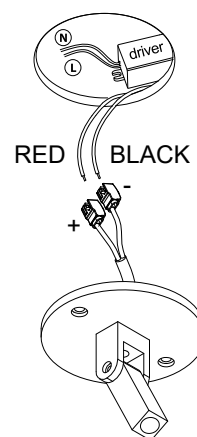


3. Connect the wires

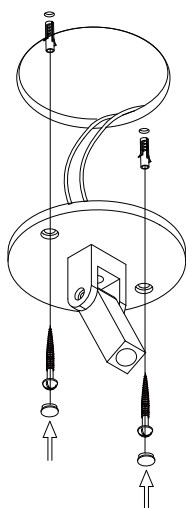


4. Align, mark and drill holes to apply the screws

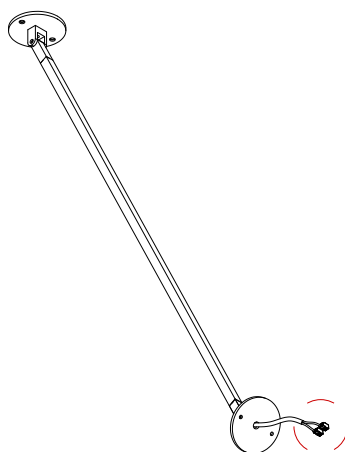

5. More lamps. Driver with a Sufficient power is suggested

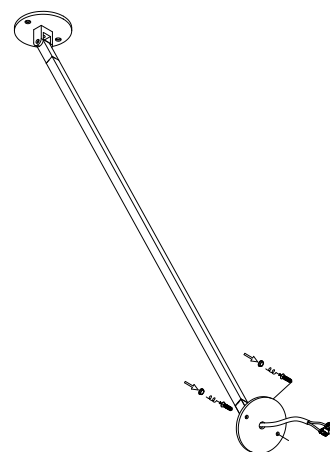

6. Align, mark and drill holes to apply the screws

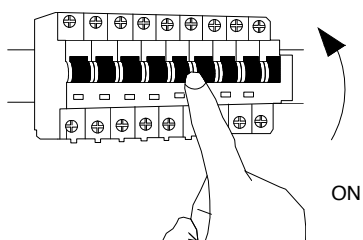

7. Turn on the general Switch

