



NOVA LUCE


9088115

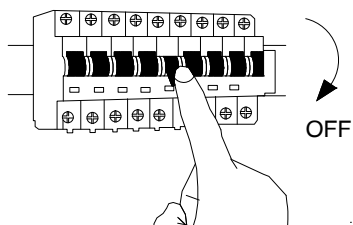


1. Turn off the general Switch

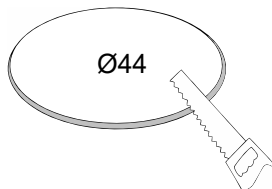


2. Make a cut out

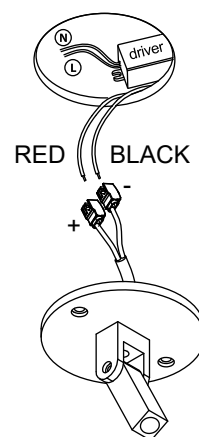


3. Connect the wires

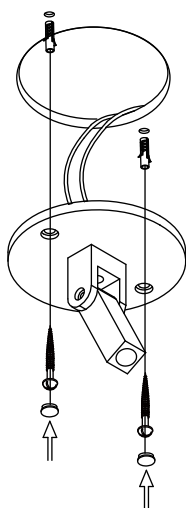


4. Align, mark and drill holes to apply the screws

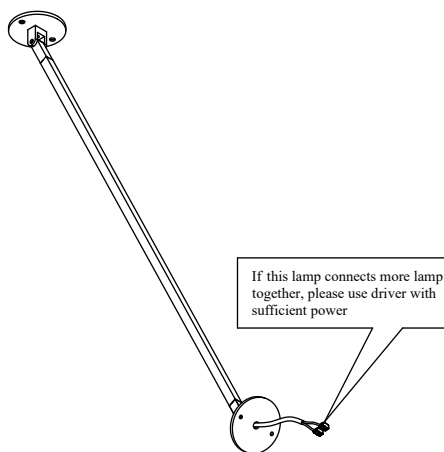

5. Connect the wires

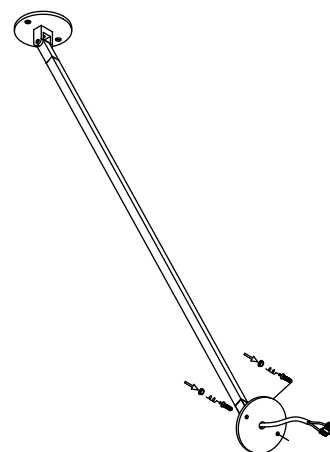

6. Align, mark and drill holes to apply the screws

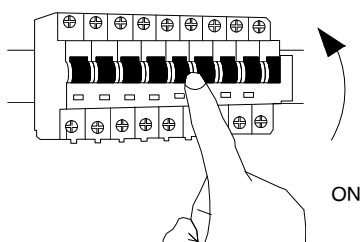

7. Turn on the general Switch

