



1

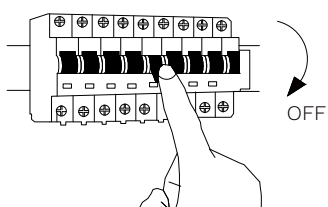


Turn off the general switch

2

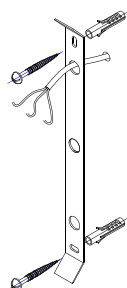


Align, mark and drill holes to apply the screws

3

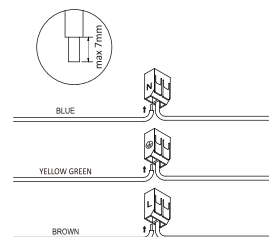

Connect the 3 wires


4

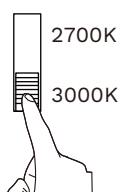

ATTENTION!
Turn off the light
befor changing the
color temperature


Changing the color temperature

5



Apply the side screws

5

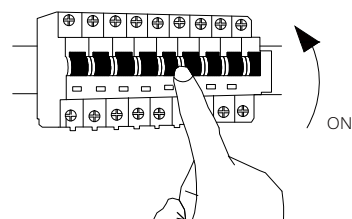

Turn on the general switch

