



1

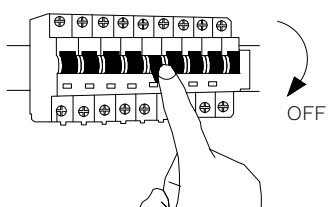


Turn off the general switch

2

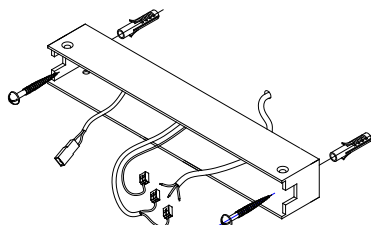


Align, mark and drill holes to apply the screws

3

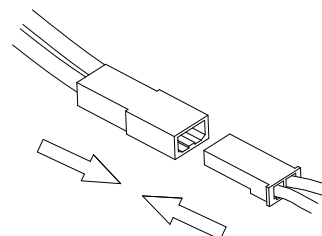


Plug wires in, by clicking them

4

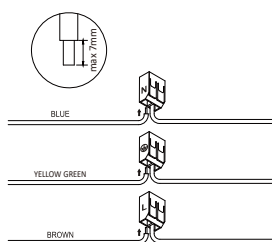

Connect the 3 wires


5

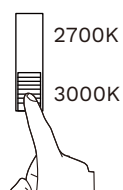

ATTENTION!
Turn off the light
befor changing the
color temperature


Changing the color temperature

6

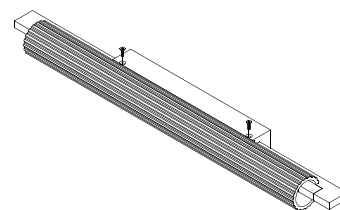

Apply the side screws

7

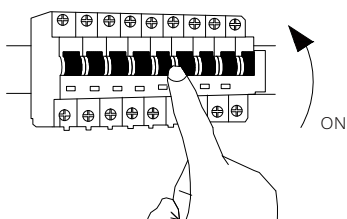

Turn on the general switch

