



1

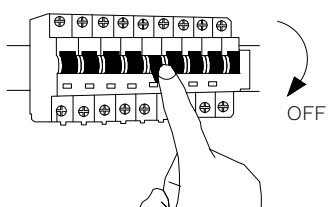

Turn off the general switch

2

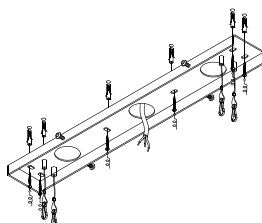


Align, mark and drill holes  
to apply the screws

3




Connect subordinate ropes  
for installing the wires

4

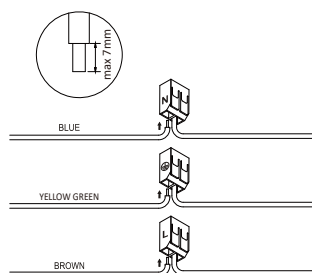

Connect the 3 wires


5

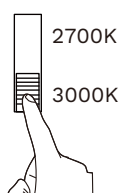

**ATTENTION!**  
Turn off the light  
befor changing the  
color temperature


Changing the color temperature

6

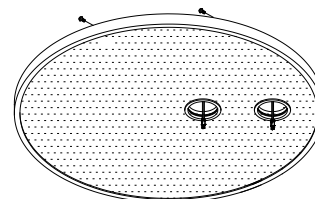


Apply the side screws

7

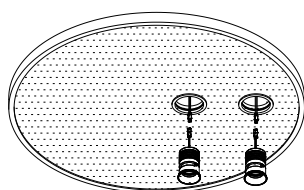

insert the spotlight &  
Plug wires in, by clicking them

8

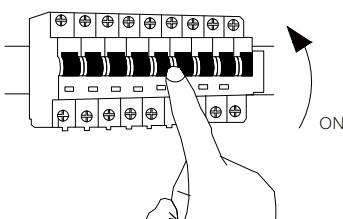

Turn on the general switch

