


NOVA LUCE


9111361, 9111362

1

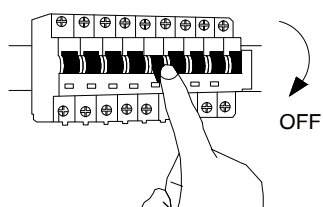


Turn off the general switch

2

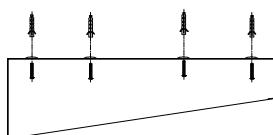


Align, mark and drill holes
apply plastic anchors & tie up screws

3




Connect the wires

4

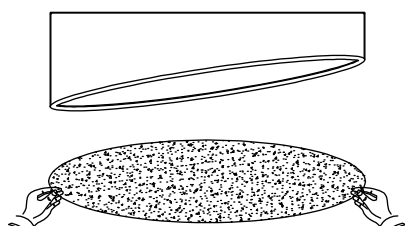

Apply the glass

5

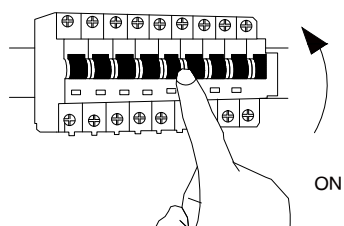

Turn on the general switch

