


# NOVA LUCE


9113777/ 9113778

①

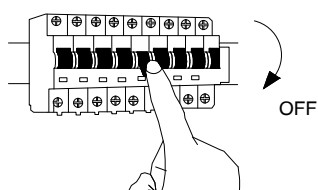


Turn off the general switch

②

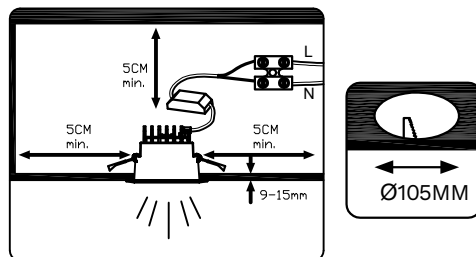


Create a CutOut



③

3. Connect wires

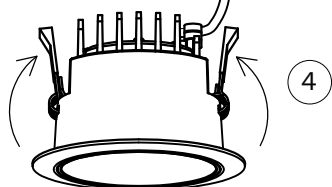

④


4. Press brackets together to insert the luminaire into the hole



⑤

5. Fix luminaire into place

⑥

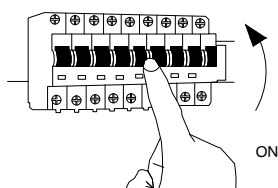

Turn on the general Switch

