



1

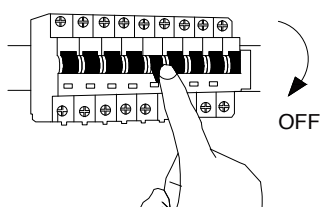


Turn off the general switch

2

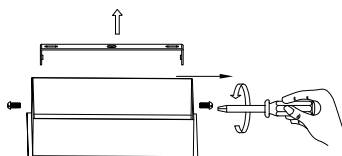


Remove the side screws

3

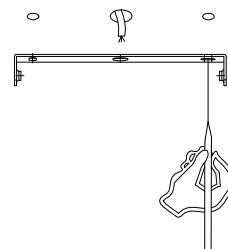


Mark the areas where to drill

4

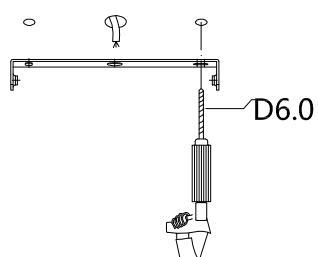


Drill on the marked areas

5

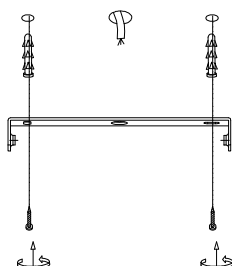


Apply plastic anchors  
With screws

6

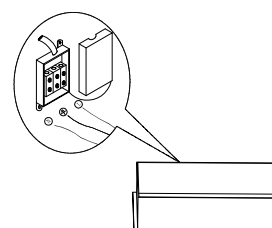


Connect the wires

7

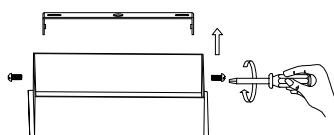

Apply side screws

8

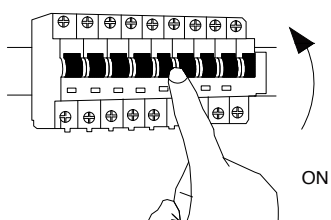

Turn on the general switch

