



1

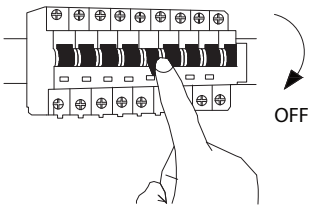


Turn off the general switch

(2)

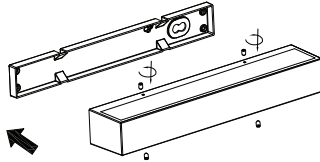



Dismantle the product

(3)

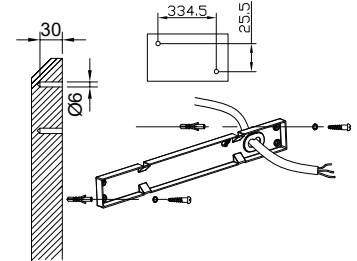

Drill holes & apply plastic anchors
With screws

4

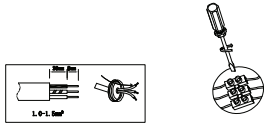

INCOMING SUPPLY

LIVE (Brown or Red)

EARTH (Green & Yellow)

NEUTRAL (Blue or Black)

TO FITTING

LIVE

EARTH

NEUTRAL

Connect the wires


5



<table><tr><td></td><td></td><td>■</td></tr><tr><td>CW</td><td>NW</td><td>WW</td></tr></table>			■	CW	NW	WW	2700K
		■					
CW	NW	WW					
<table><tr><td></td><td>■</td><td></td></tr><tr><td>CW</td><td>NW</td><td>WW</td></tr></table>		■		CW	NW	WW	3200K
	■						
CW	NW	WW					
<table><tr><td>■</td><td></td><td></td></tr><tr><td>CW</td><td>NW</td><td>WW</td></tr></table>	■			CW	NW	WW	4000K
■							
CW	NW	WW					


Control the CCT switch

©

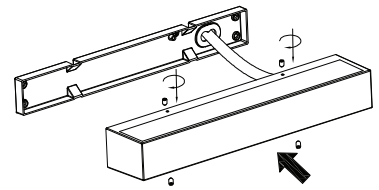

Apply the element in to place
With nuts

7

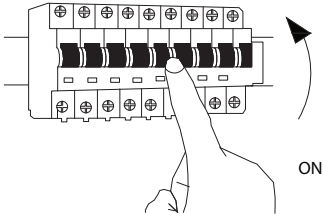

Turn on the general switch

