



1

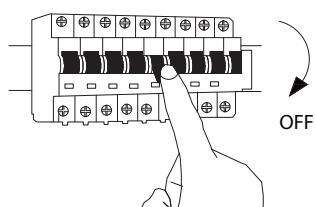


Turn off the general switch

2

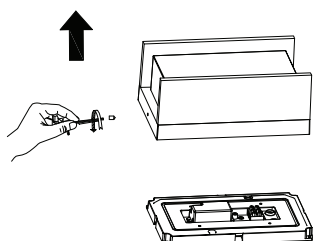


Dismantle the product

3

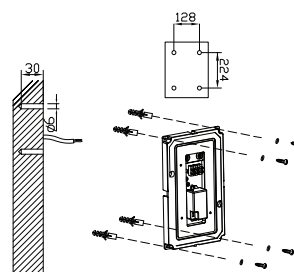

Drill holes & apply plastic anchors
With screws


4

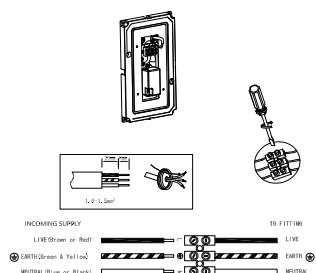

Connect the wires


5

CW	NW	WW	2700K
CW	NW	WW	3200K
CW	NW	WW	4000K

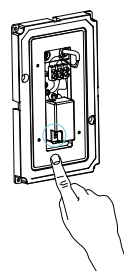


Control the CCT switch

6

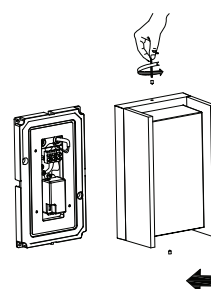

Apply the element in to place
With side nuts

7

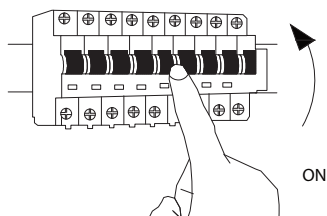

Turn on the general switch

