



1

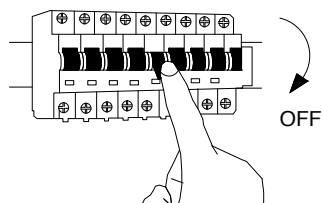


Turn off the general switch

2

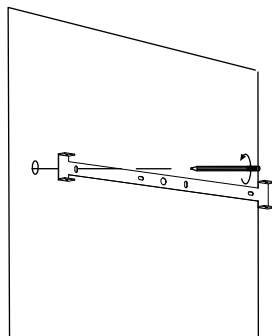


Mark where to drill holes

3

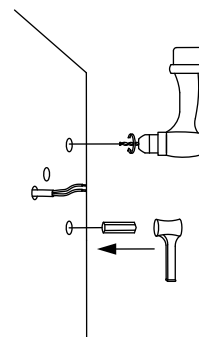

Make holes & apply anchors

4

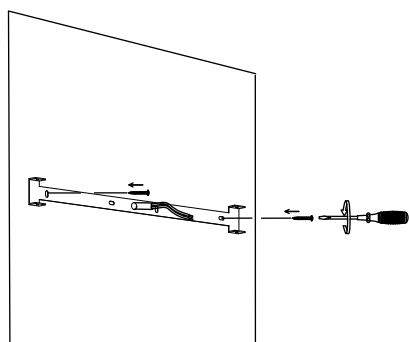

Tie up the screws
to make it stable

5

CCT switch in canopy


2700K 3000K 4000K



2700K 3000K 4000K





2700K 3000K 4000K




Choose the color temperature

6

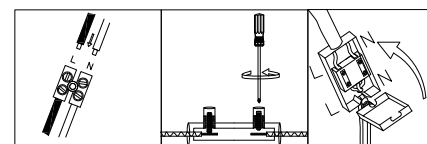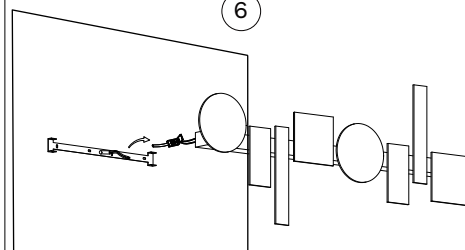


Connect the wires

7

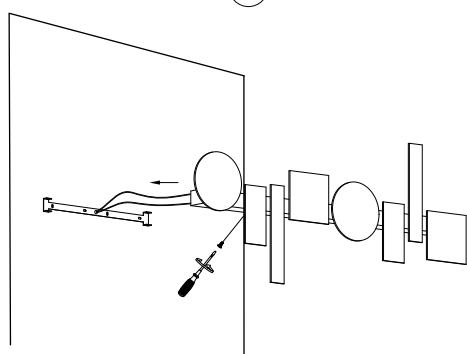

Put it in place
& Apply side screws

8

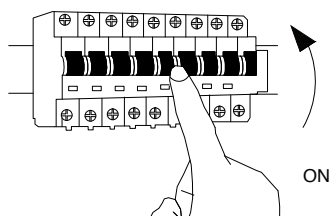

Turn on the general switch

9

