



1

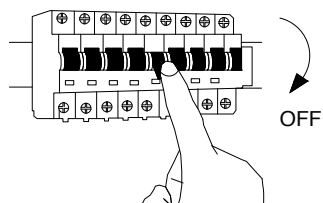


Turn off the general switch

2

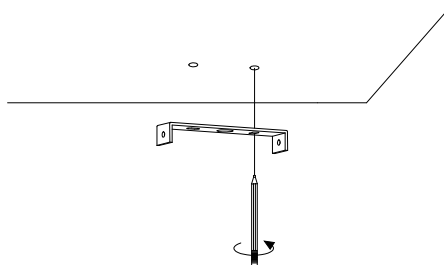


Mark where to drill holes

3

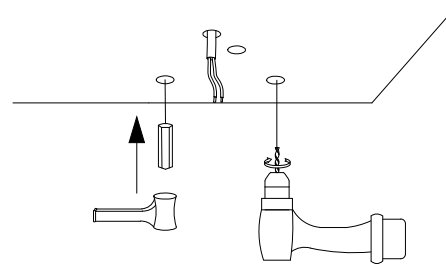

Make holes & apply anchors

4

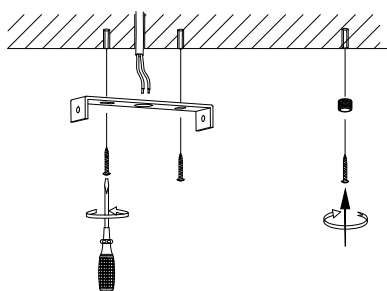

Tie up the screws
to make it stable

5

CCT switch in canopy

2700K 3000K 4000K



2700K 3000K 4000K




2700K 3000K 4000K




Choose the color temperature

6

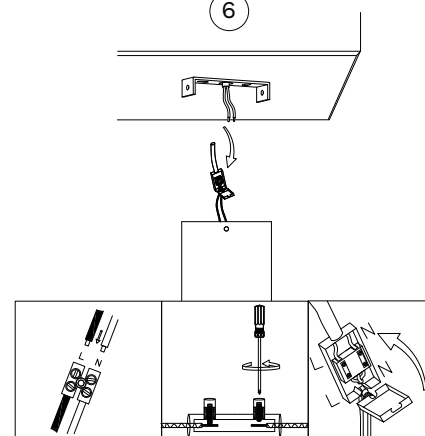


Connect the wires

7

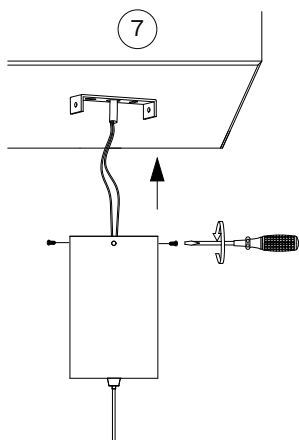


Put it in place
& Apply side screws

8

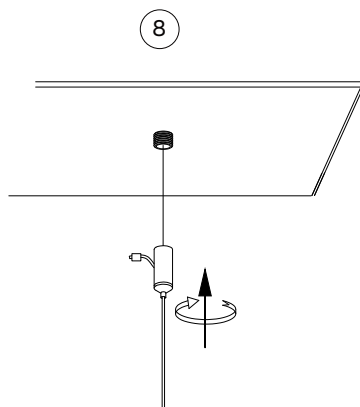

Rotate the pole in

9

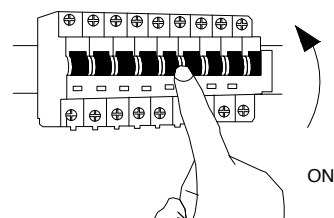

Turn on the general switch



NOVA LUCE

9130651

