


NOVA LUCE


INSTALL

9013620 / 9136136 / 9013720 / 9136142


Example of surface installation

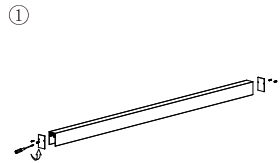


Tie up screws to assemble parts

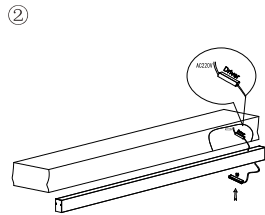

Connect wires
& insert the electrical connector


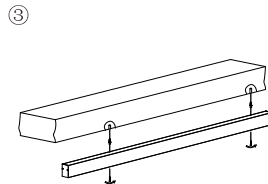


Tie up screws to make it stable

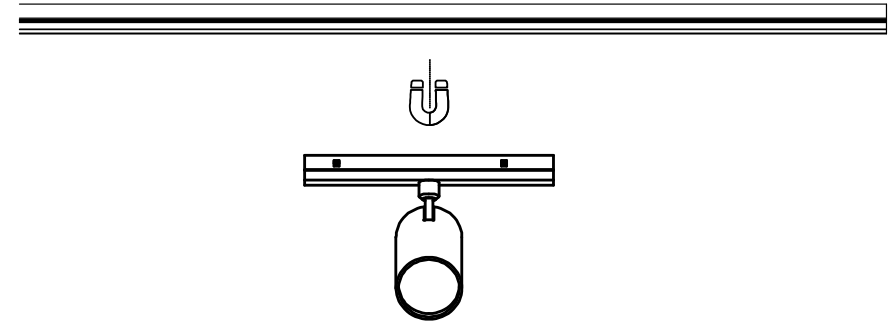


Example of corner installation

9136303 / 9110022
9136290

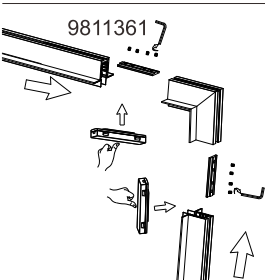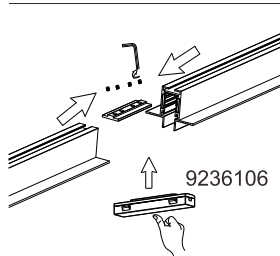


Tie up the screws
& insert the connectors

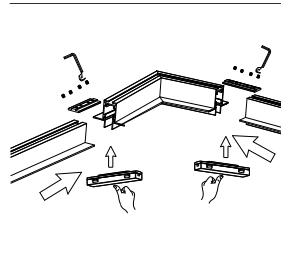

Example of Recessed installation


9999101

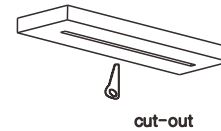

cut-out


Step:1

Create a CutOut

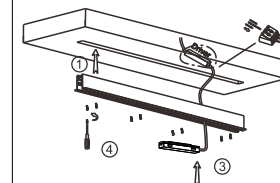


Step:2

Tie up parts into place
& connect wires
& the electrical connector

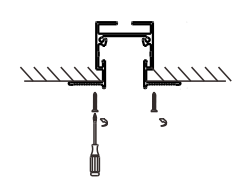


Step:3

Tie up screws



Step:4

Apply a sealer




Step:5

Complete the installation
fixing the final layer

NOVA LUCE

Example of recessed installation

9136335 / 9136100

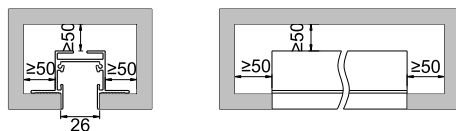

① Create a CutOut	② Connect wires	③ Fix it in place
④ Tie up screws to tie up screws	⑤ Connect the electrical connector	⑥ Insert it in place
⑦ Insert it in the CutOut	⑧ Tie up screws to make it stable	⑨ Complete the installation
⑩ Tie up screws to make it stable	⑪ Apply a sealer	⑫ Apply paint

Example of hanging installation

9136338 / 9236107 / 9136101

① Make holes	② Apply plastic anchors	③ Fix parts into place by rotate
④ Tie up screws to assemble them	⑤ Connect the track by rotate	⑥ Assemble parts by applying screws
⑦ Insert the electrical connector into place	⑧ Connect wires & connect tracks together by rotate	⑨ Complete the installation