



NOVA LUCE


9136180, 9136181

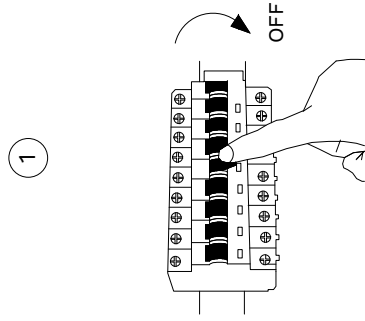


Turn off the general switch

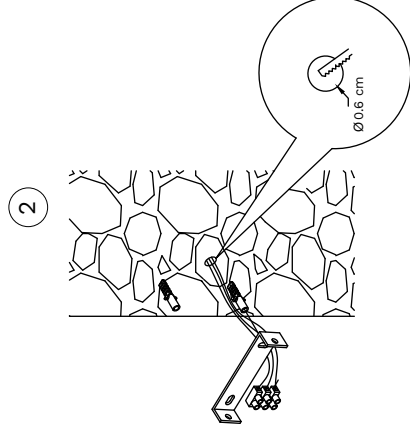


Create a CutOut

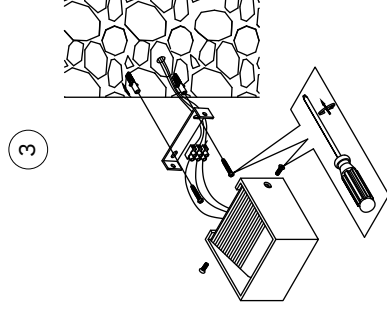


Mark, drill holes,
Apply plastic anchors
& Tie up screws

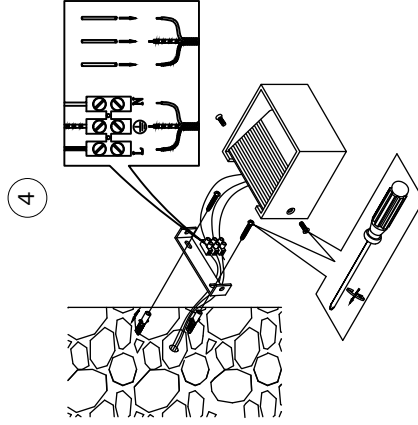

Connect wires

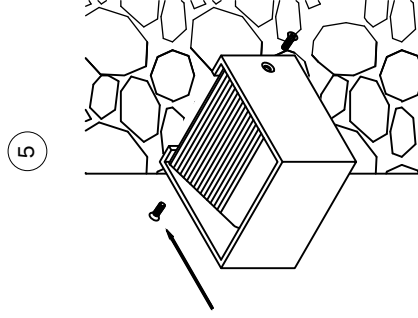

Apply the part into place
By tying up the side screws

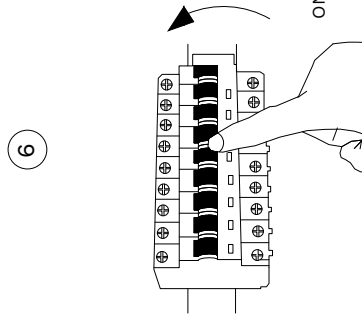

Turn on the general switch

