

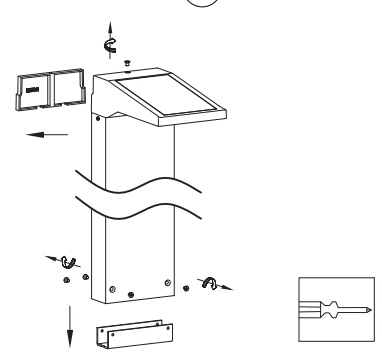
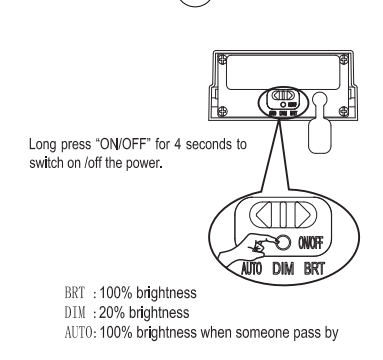
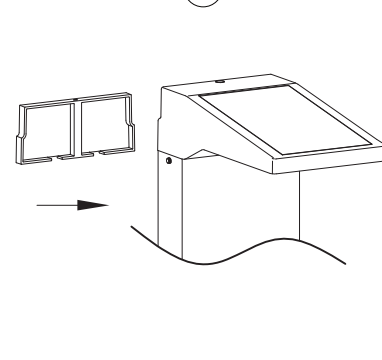
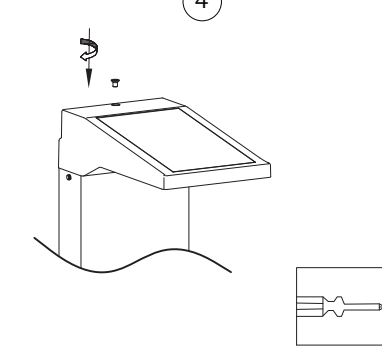
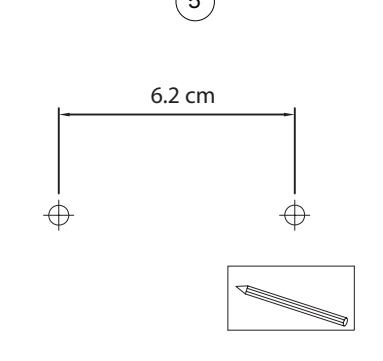
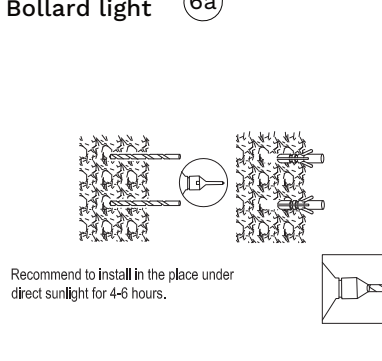
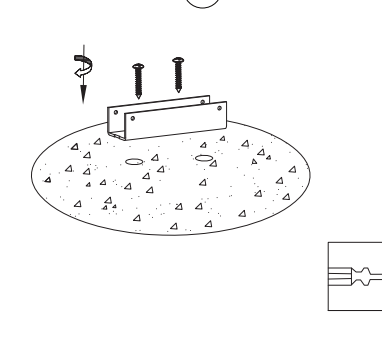
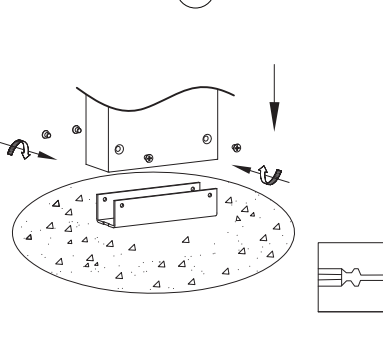


①  Dismantle parts by untying screws	②  Long press "ON/OFF" for 4 seconds to switch on /off the power. BRT : 100% brightness DIM : 20% brightness AUTO: 100% brightness when someone pass by Make adjustments	③  Put the back plate into place
④  Tie up screws	⑤  6.2 cm Mark holes	Bollard light ⑥a  Recommend to install in the place under direct sunlight for 4-6 hours. Make holes, apply plastic anchors
⑦a  Tie up brackets by screws	⑧a  Tie up side screws	Spike ⑥b  Recommend to install in the place under direct sunlight for 4-6 hours. Tie up screws to make it stable

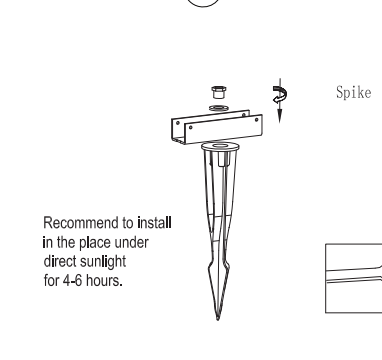


7b

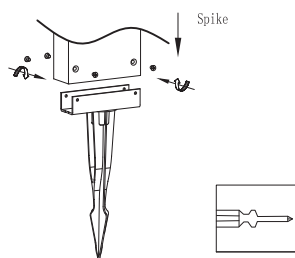

Tie up parts together
& fix it in place

8b

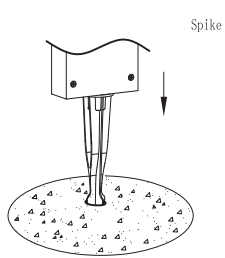

Insert into the soil

9

