



①

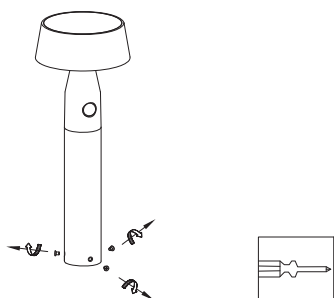


Dismantle parts by untying screws

②



Remove from the base

③

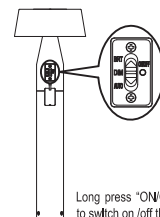


Long press "ON/OFF" for 4 seconds to switch on /off the power.

BRT : 100% brightness
DIM : 20% brightness
AUTO: 100% brightness when someone pass by

Make adjustments

Bollard light


④a

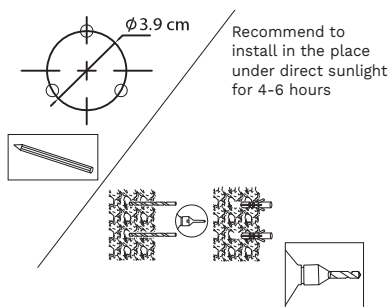

Recommend to install in the place under direct sunlight for 4-6 hours


Mark holes, apply plastic anchors

⑤a

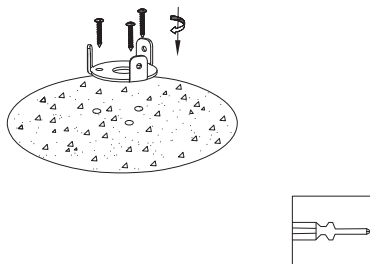

Tie up screws


⑥a

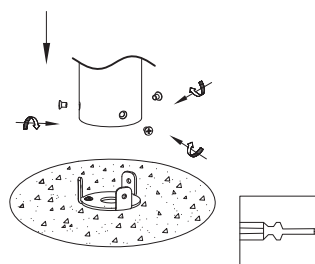

Fix it in place by tying up side screws

Spike


④b

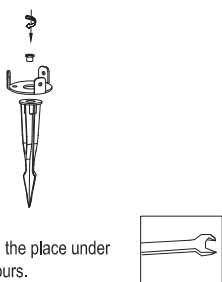

Recommend to install in the place under direct sunlight for 4-6 hours.


Tie up screws

⑤b

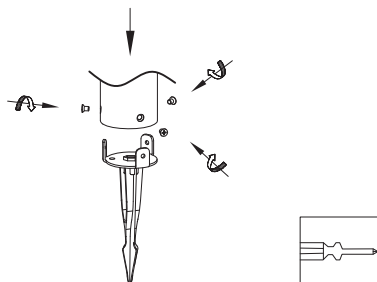

Tie up parts together & fix it in place

⑥b

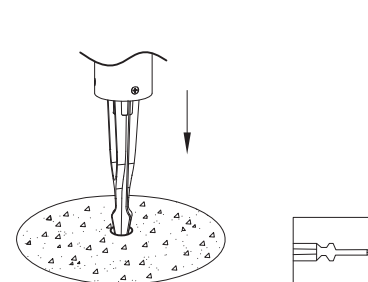

Insert into the soil

