



NOVA LUCE

9176109 9176110

Option 1




1

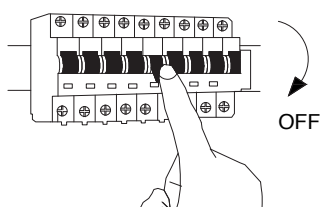


Turn off the general switch

2

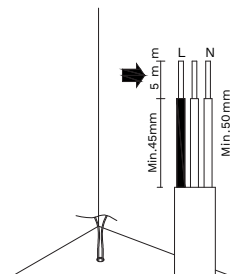


Get the wires done

3

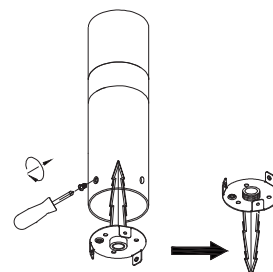


Remove the element

4

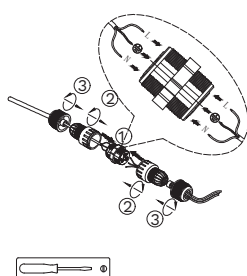


Connect the wires

5


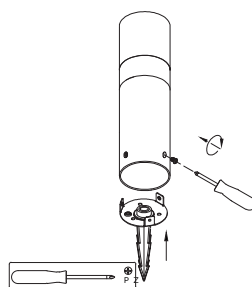


Apply the element in
Place with screws

6

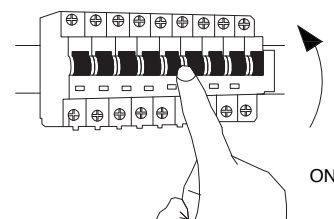


Turn on the general switch

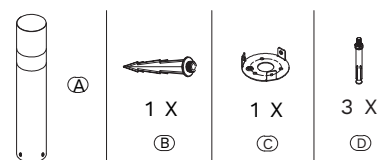


NOVA LUCE

9176109 9176110

Option 2




1

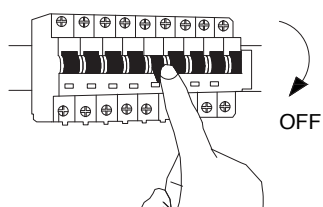


Turn off the general switch

2

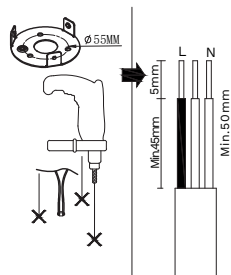


Get the wires done

3

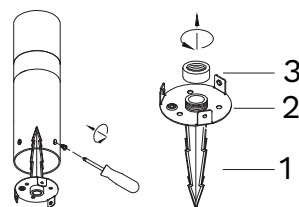


Remove the elements

4

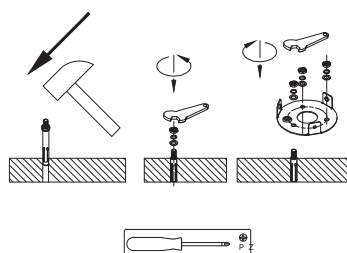


Drill holes & apply the nuts

5

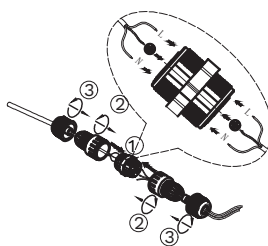


Connect the wires

6

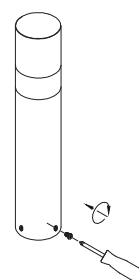


Apply the screws in place

7

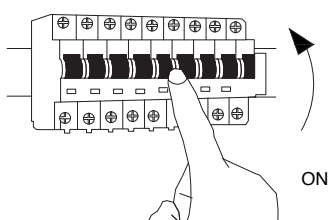

Turn on the general switch

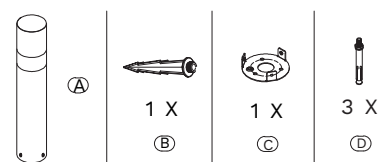

www.novaluce.com