




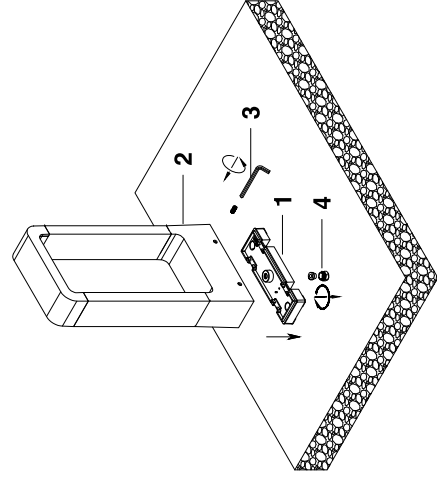

Dismantle the product

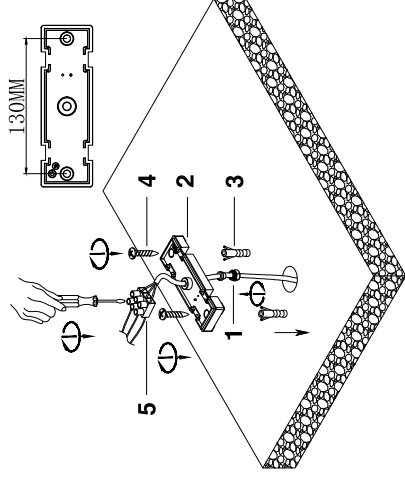

Drill holes apply plastic anchors with screws
& Connect wires

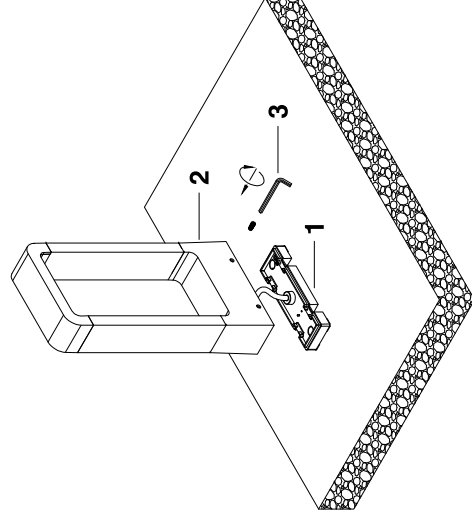

Apply the side
Nuts

