


NOVA LUCE


9180895

①

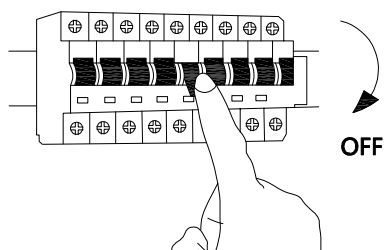


Turn off the general Switch

②

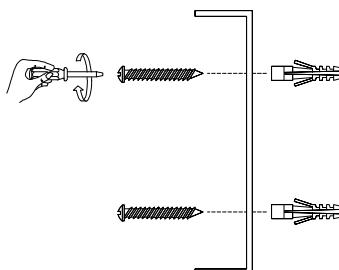


Drill holes & apply plastic anchors
With screws

③

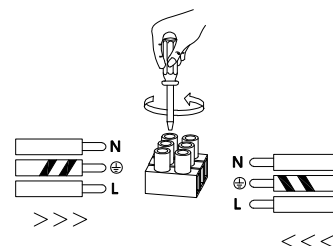


Connect the wires

④

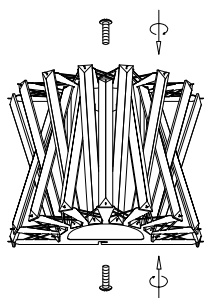


Apply the side screws

⑤

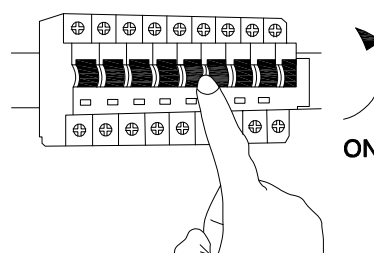

Turn on the general switch

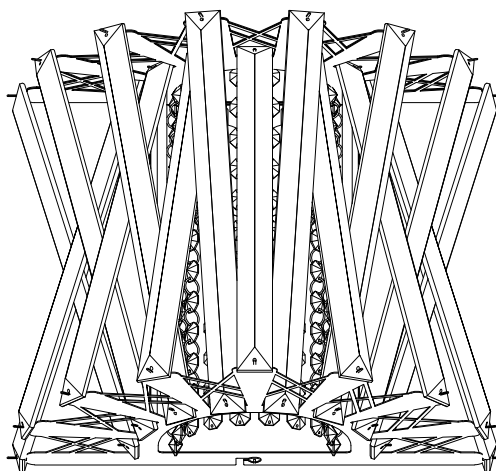

Install crystal
12 pcs of 14 # crystal=10pcs

