



1

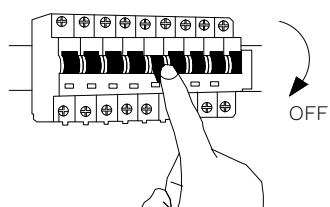


Turn off the general switch

2

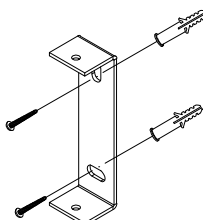


Align, mark and drill holes
to apply the base on the wall

3

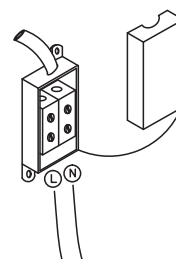


Connect the wires

4

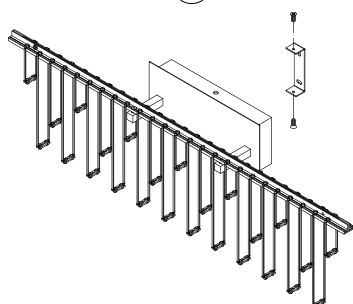

Apply the side screws


5

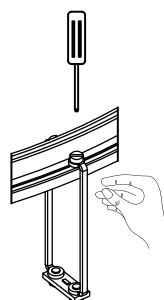

Apply the screws

When the frames or LEDs are not straight,
please loosen one screw and straighten them
by hands, then tighten the screw.

6

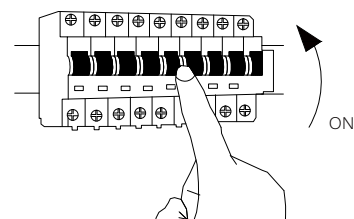

Turn on the general switch

