



1

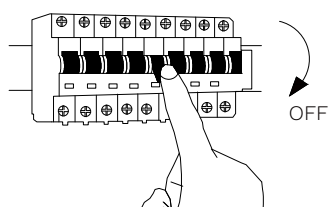


Turn off the general switch

2

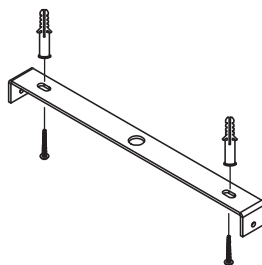


Align drill holes & apply plastic anchors with screws

3

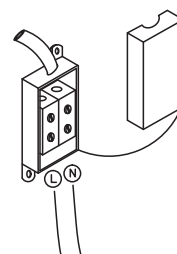


Connect the wires

4

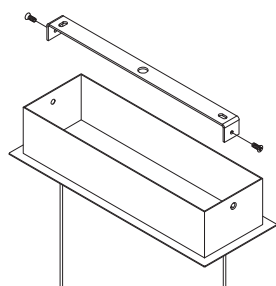

Apply the side screws


4

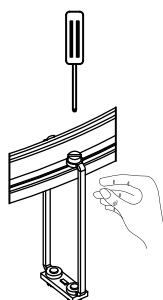

Apply the screws

When the frames or LEDs are not straight,
please loosen one screw and straighten them
by hands, then tighten the screw.

5

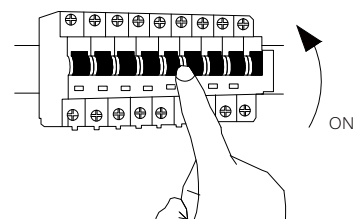

Turn on the general switch

