


NOVA LUCE


9187004

1

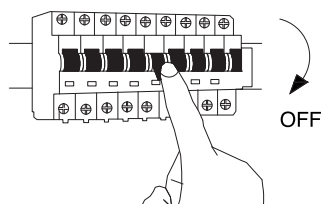


Turn off the general switch

2

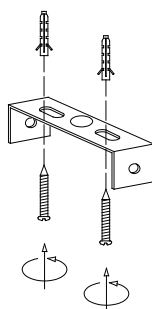


Drill holes & apply plastic anchors
With screws

3

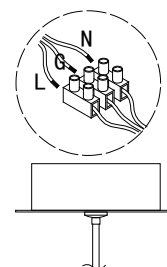


Connect the wires

4

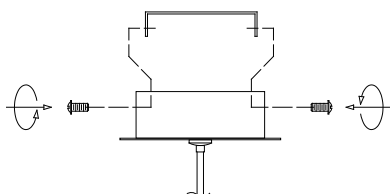


Apply side screws

5

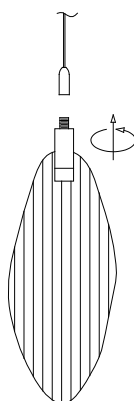

apply the glass

6

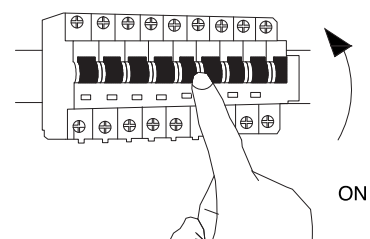

Turn on the general switch

