


NOVA LUCE


9214216 9214217

1

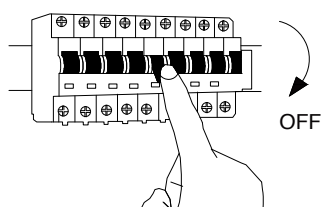


Turn off the general switch

2

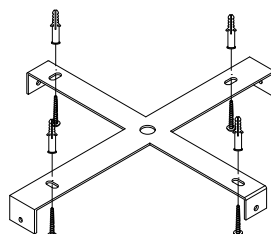


Drill holes & apply plastic anchors
With screws

3

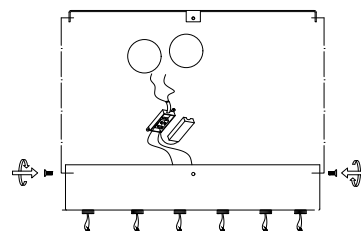


Connect the wires

4

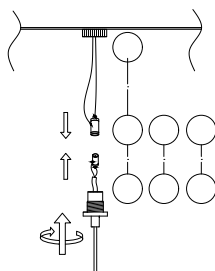

Apply the element in to place

5

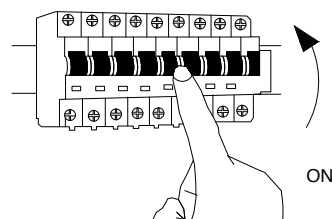

Turn on the general switch

