


①

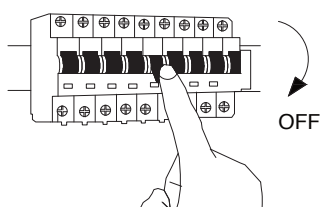

Turn off the general switch

②

Ø10mm



Drill hole 10mm

③




Apply plastic anchors
& Apply the screws

④




Connect the 3 wires

⑤

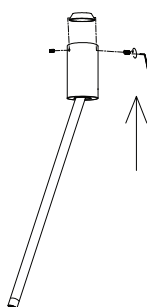

Connect with the base
& apply side screws

⑥

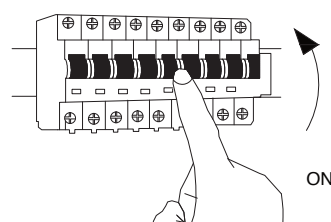

Turn on the general switch

