



1

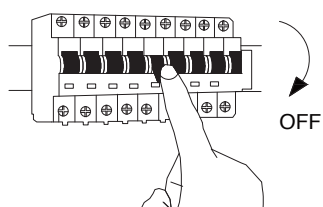


Turn off the general switch

2

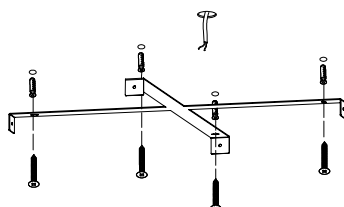


Drill holes apply plastic anchors with screws.

3

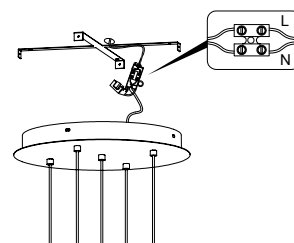


Connect the 3 wires

4

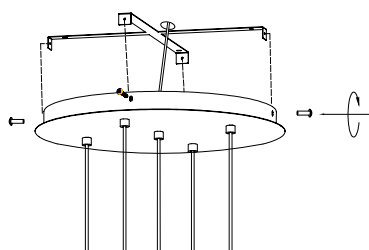


Place the brackets and apply the side screws.

5

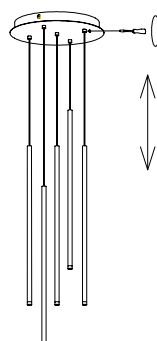


Adjust to your preferred height.

6

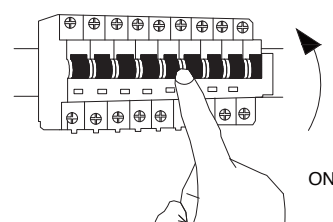

Turn on the general switch

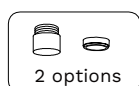

2 options

