


# NOVA LUCE

9232204 9232205  
9232206 9232207

1

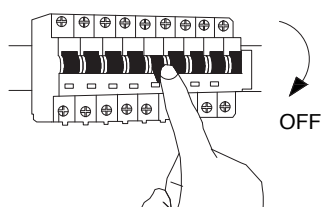


Turn off the general switch

2




Make a hole

3

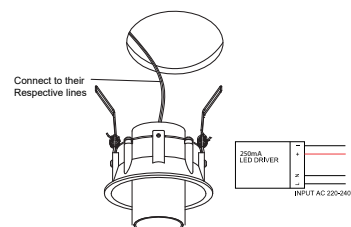


Connect the wires

4

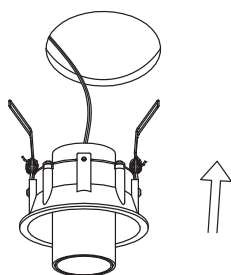

Apply the product in to place

5

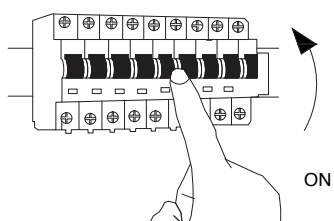

Turn on the general switch

