


NOVA LUCE


9232230
9232231
9232232
9232233

1

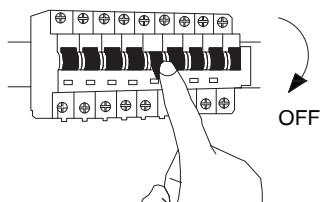


Turn off the general switch

2

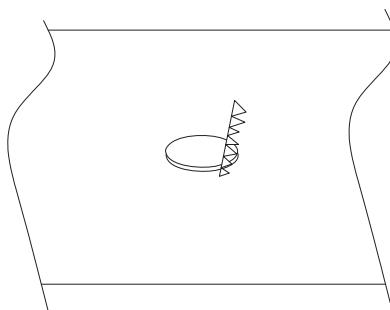


Create a 3.5 cm CutOut

3

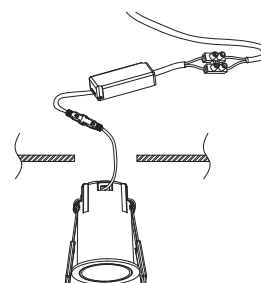


Connect the driver to the power

4

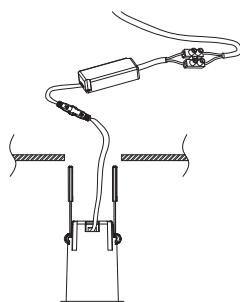

Place tha luminaire into the hole

5

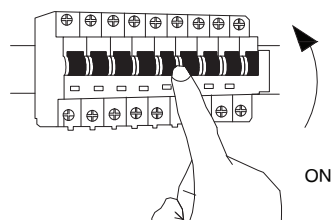

Turn on the general switch

