


NOVA LUCE


9232234
9232235
9232236
9232237

1

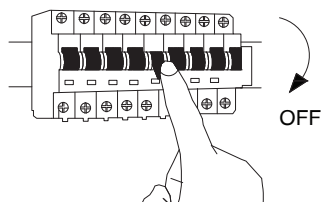


Turn off the general switch

2

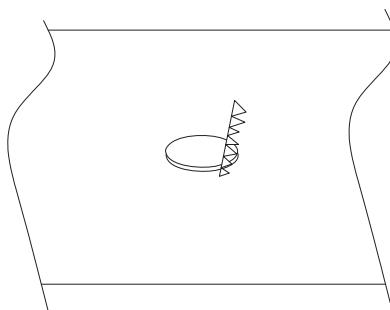


Create a 4.5 cm CutOut

3

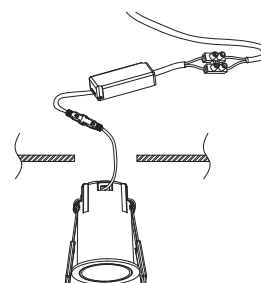


Connect the driver to the power

4

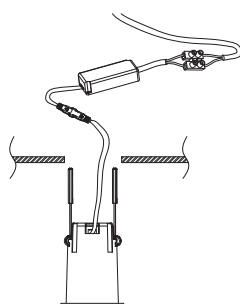

Place the luminaire into the hole

5

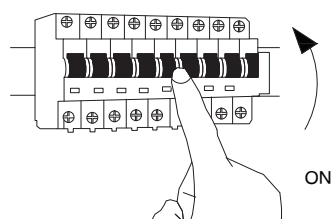

Turn on the general switch

