
NOVA LUCE


9236464

1

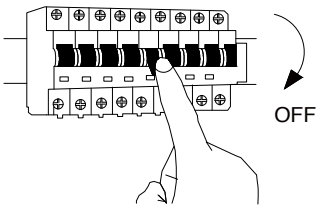


Turn off the general switch

2

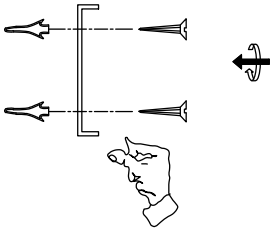


Drill holes & apply plastic anchors
With screws

3

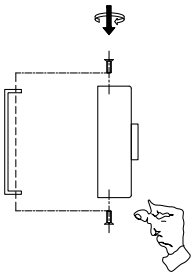


Connect the wires
& Apply the side screws

4

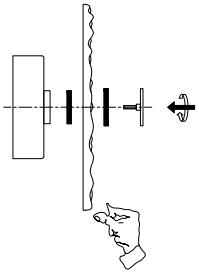


Apply the elements in to place

5

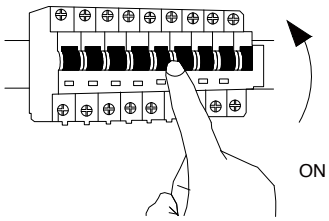

Turn on the general switch

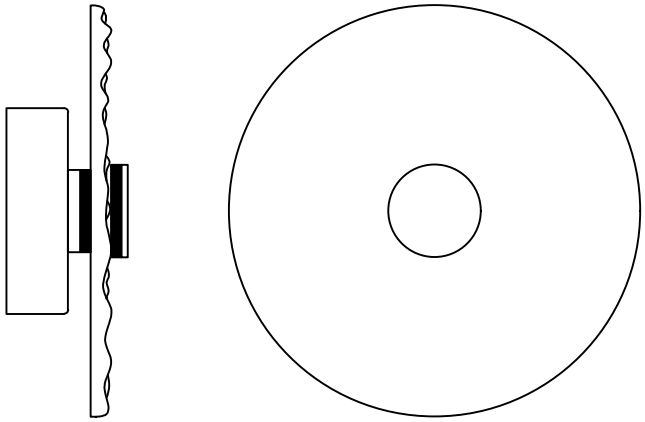

www.novaluce.com