NOVA LUCE

9236501

①

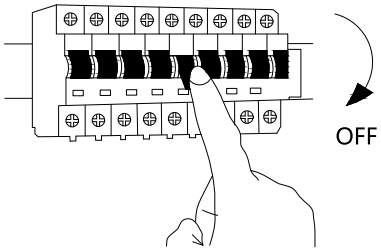

Turn off the general Switch

②

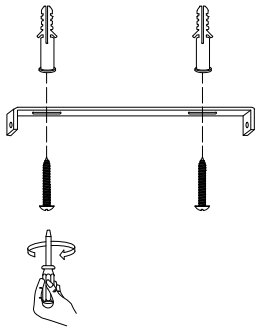

Drill holes & apply plastic anchors
With screws

③

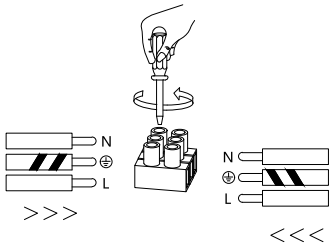

Connect the wires

④

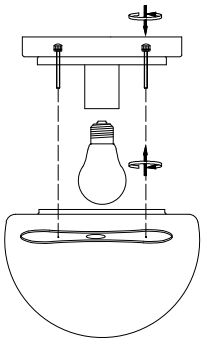

Instal glass shades

⑤

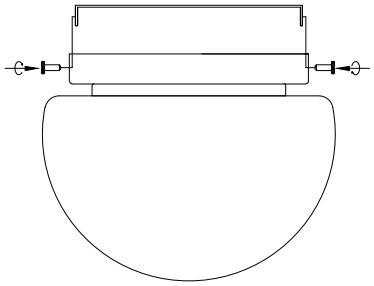

Apply the side screws

⑥

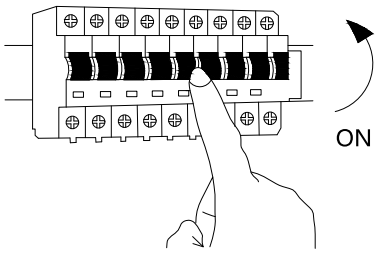

Turn on the general switch

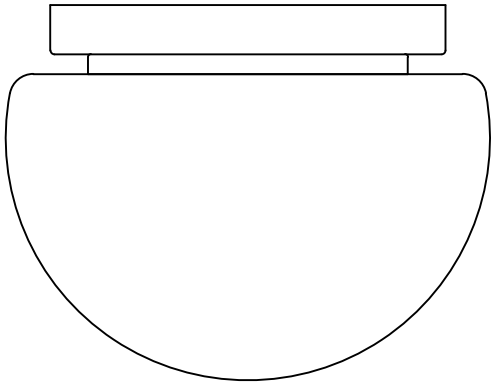

www.novaluce.com