



1

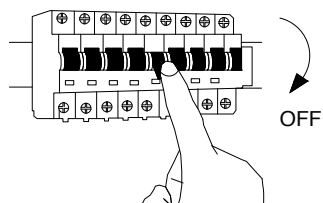


Turn off the general switch

2

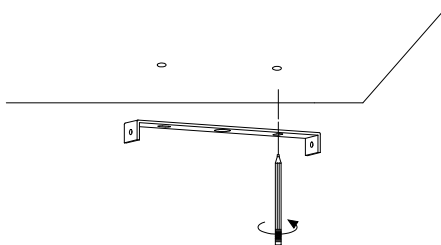


Mark where to drill holes

3

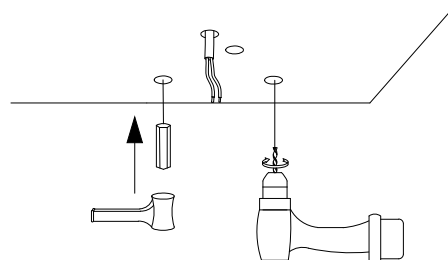

Apply plastic anchors

4

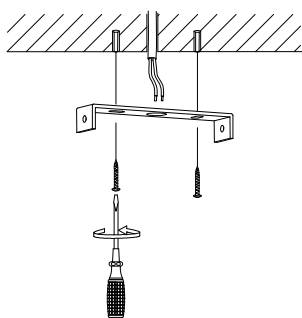

Apply screws

5

CCT switch in canopy


2700K 3000K 4000K



2700K 3000K 4000K




2700K 3000K 4000K




Choose the color temperature

6

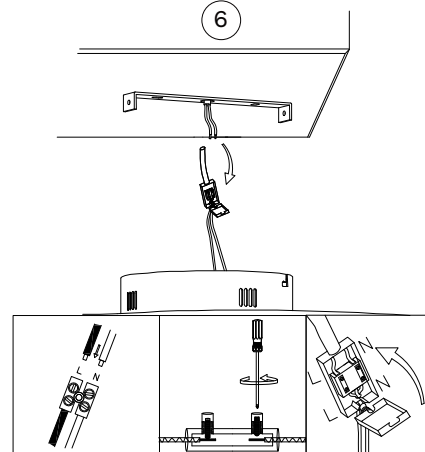


Connect the wires

7

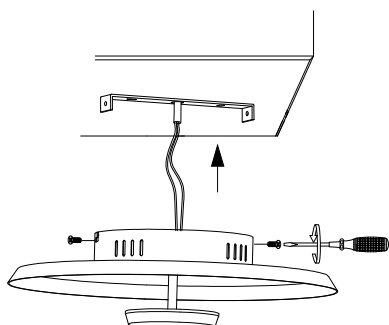


Apply side screws


8

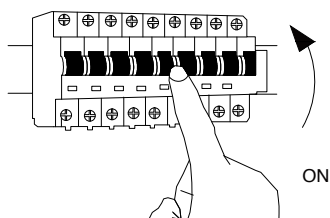

Turn on the general switch

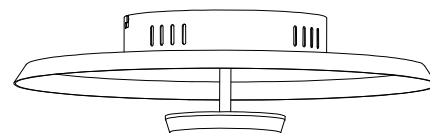


1

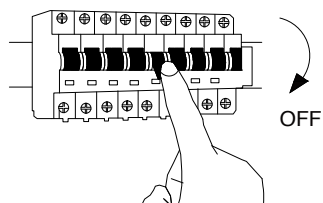


Turn off the general switch

2

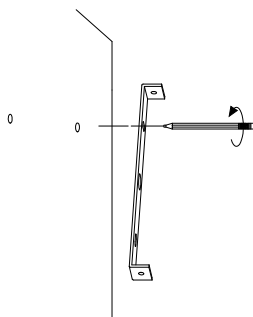


Mark where to drill holes

3

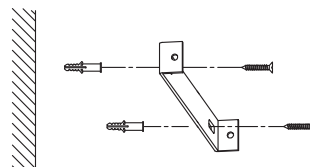

Apply plastic anchors




4

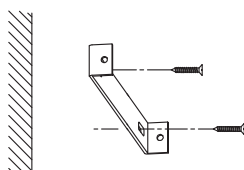

Apply screws



5

CCT switch in canopy

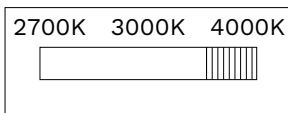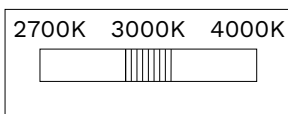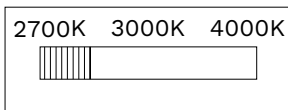


Choose the color temperature

6

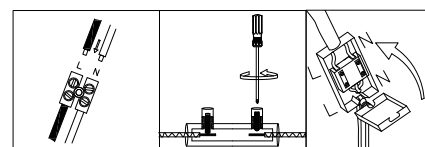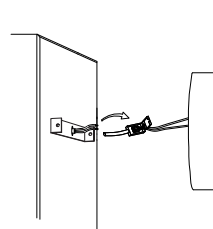


Connect the wires

7

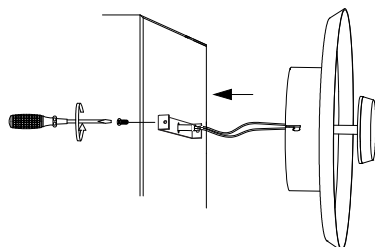

Apply side screws

8

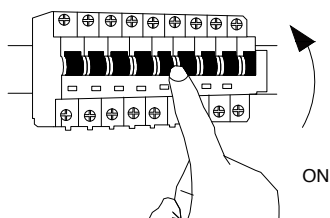

Turn on the general switch

