


NOVA LUCE


9252001 9252002
9252003 9252004

1

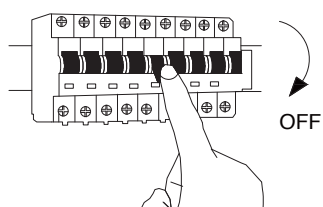


Turn off the general switch

2

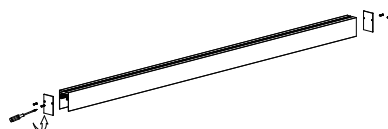


Apply the side pieces

3

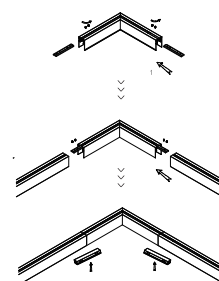


Apply correctly

4

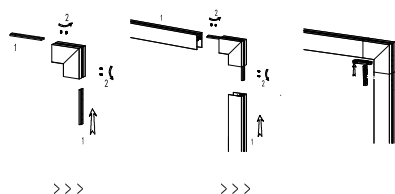


Apply the pieces correctly

5

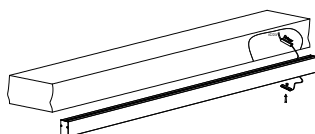


Connect the wires

6

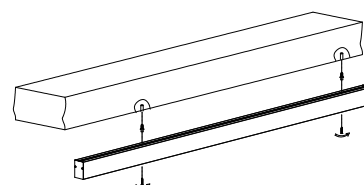


Put it in place

7

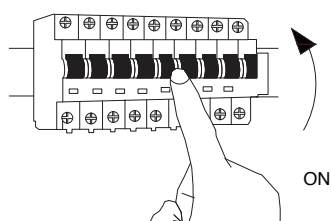

Turn on the general switch

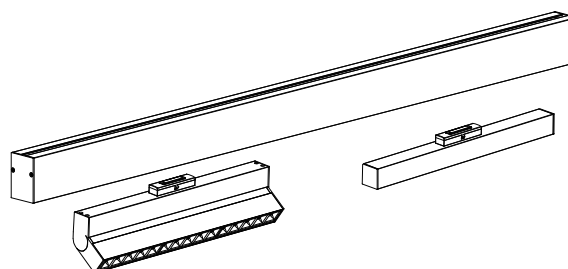

^^
^^
^^

^^
^^
^^

