
NOVA LUCE


9267021

1

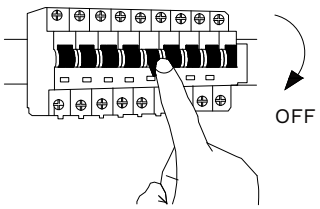


Turn off the general switch

2

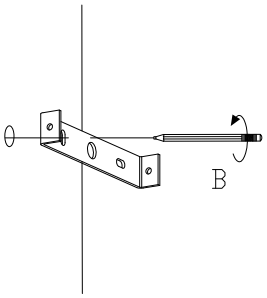


Mark where to drill holes

3

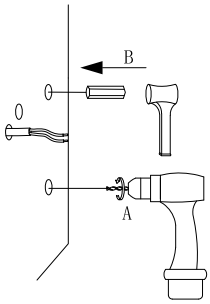


Make holes & apply anchors


4

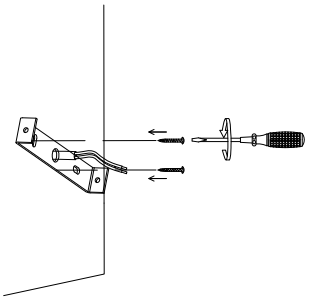

Tie up the screws
To make it stable


5

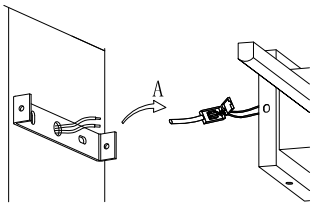

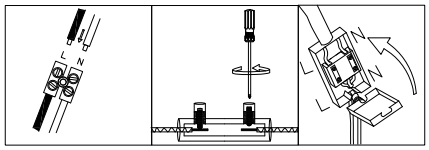


Connect the wires

6

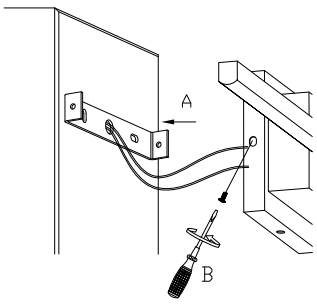

Apply side screws

7

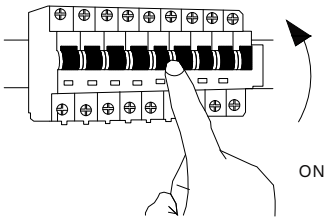

Turn on general switch

