



NOVA LUCE

9271431, 9271491

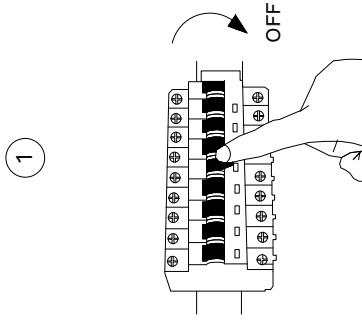


1

Turn off the general switch

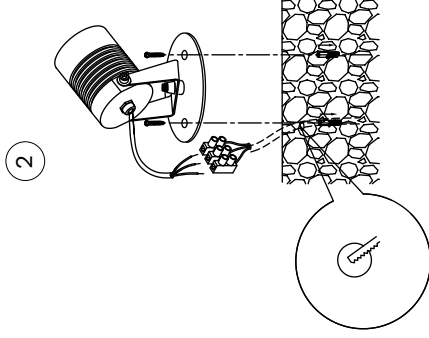


2

Create a CutOut

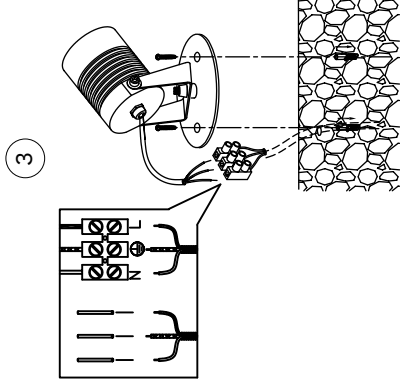

3


Connect wires

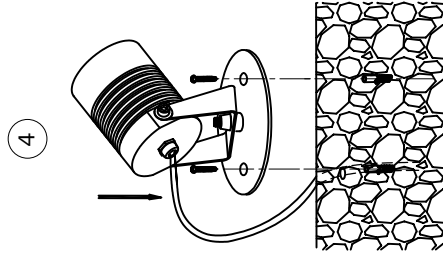

4

Fix it in place by tying up the screws

5

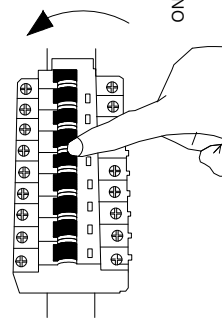

Turn on the general switch

6

