



NOVA LUCE

9271431, 9271491

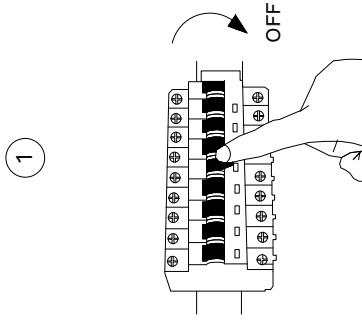


1

Turn off the general switch

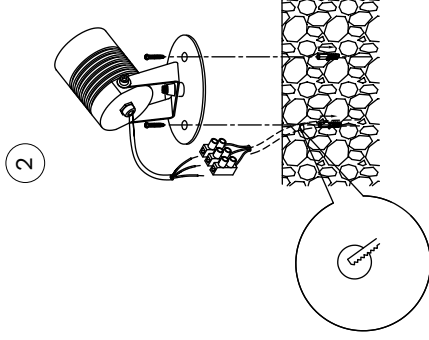


2

Create a CutOut

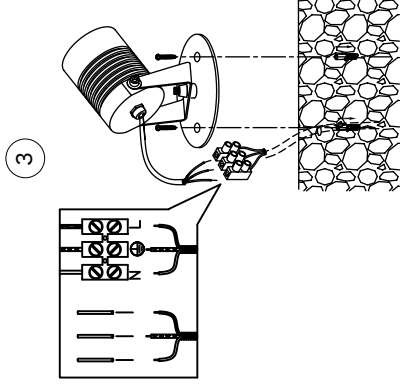


3

Connect wires

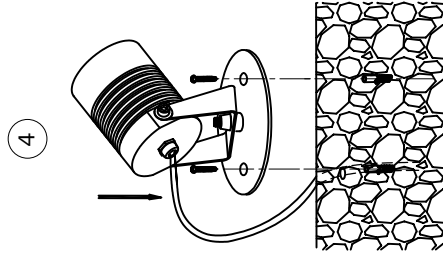


4

Fix it in place by tying up the screws

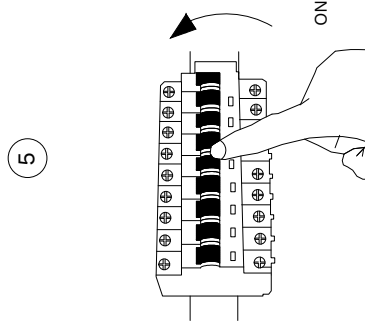

5

Turn on the general switch

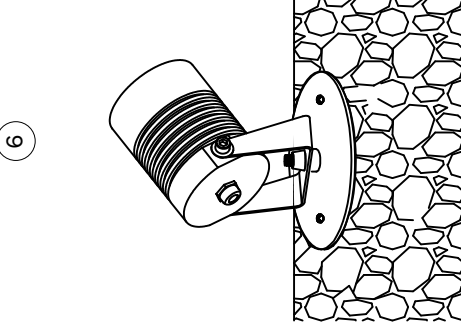

6

