


NOVA LUCE

9277151

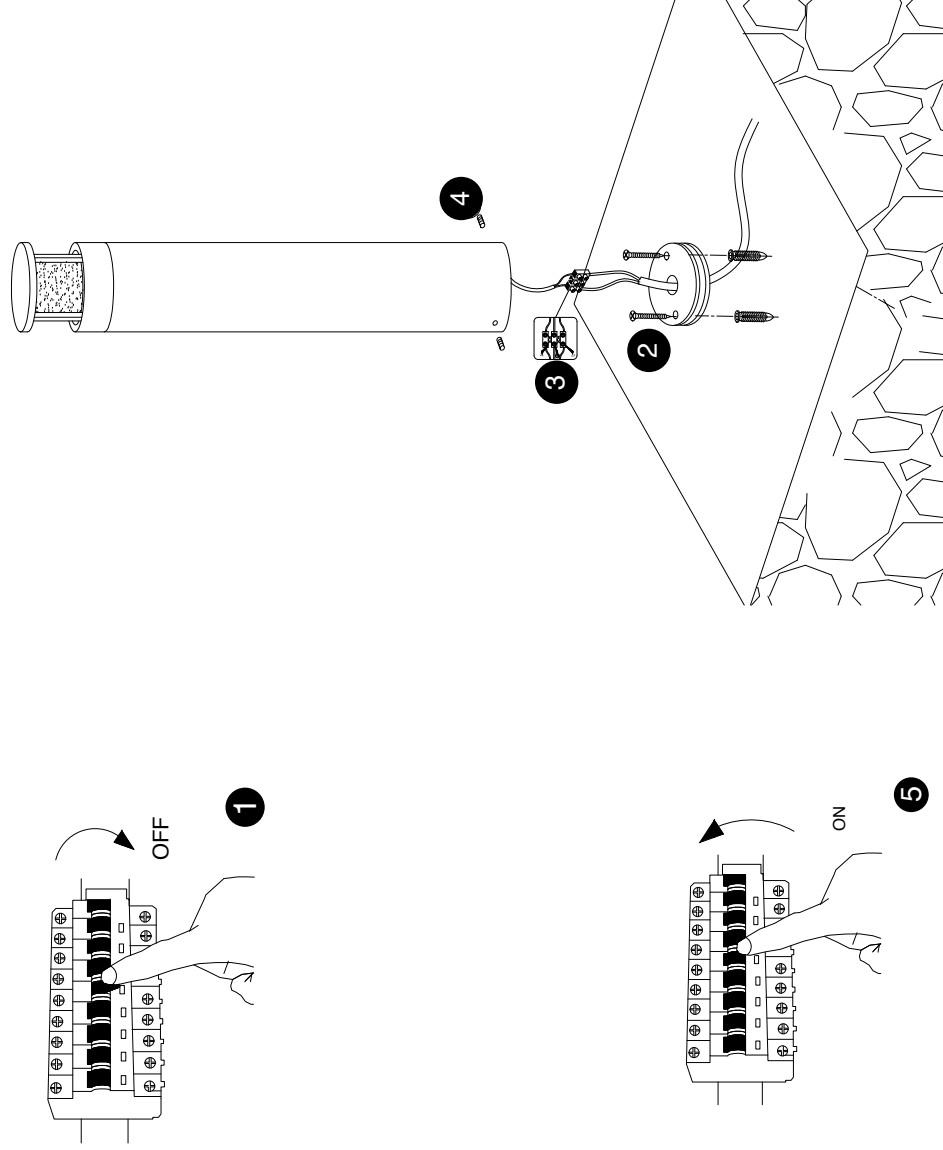

1. Turn off general switch
2. Drill holes, apply plastic anchors
 3. Connect the wires
4. Apply the side screws
5. Turn on the general switch