



1

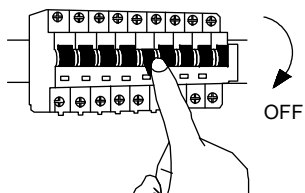


Turn off the general switch

2

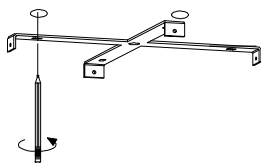


Mark the areas

3

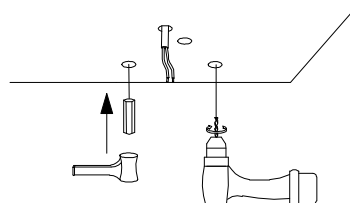


Drill holes on the marked areas

4

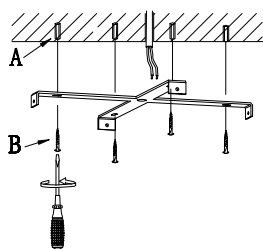


Apply plastic anchors & screws

5

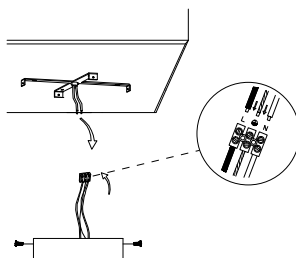


Connect the wires

6

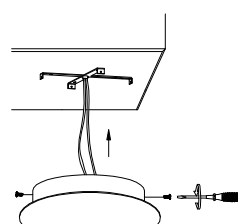

Put the canopy in place
& apply the side screws

4

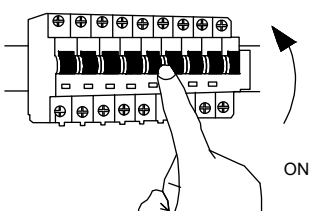

Turn on the general switch

