
NOVA LUCE

9333231

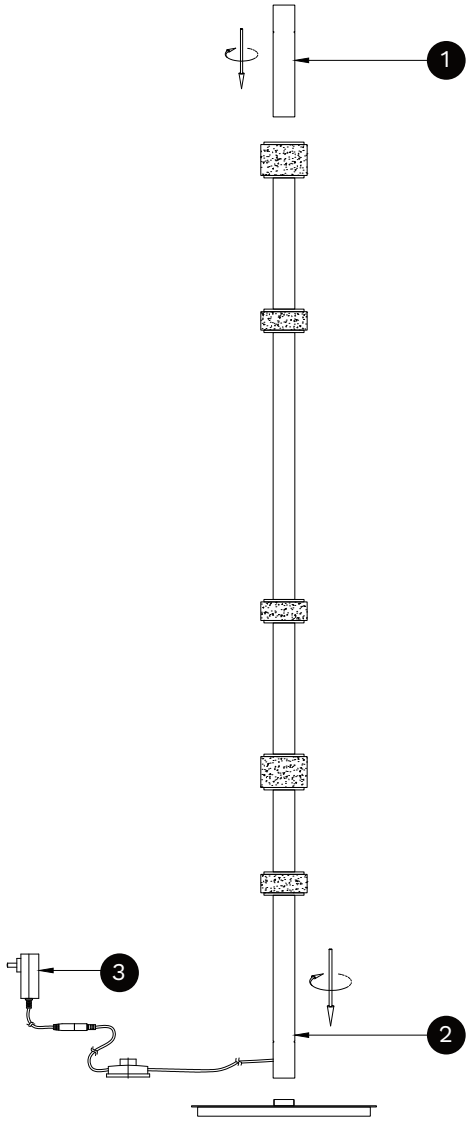

1. Apply the element in to place
2. Screw it in
3. Plug it in