
NOVA LUCE


9345614

1

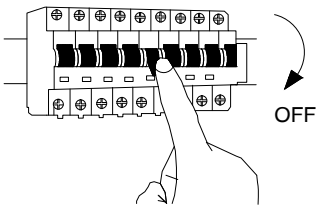


Turn off the general switch

2

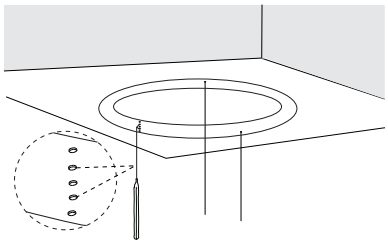


Mark where to drill holes

3

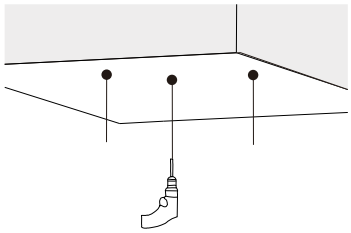


Drill on the marked areas

4

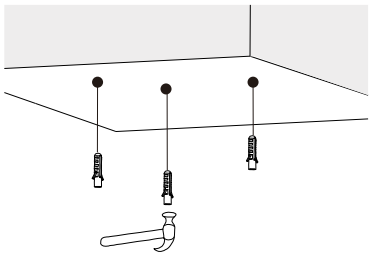


Apply plastic anchors

5

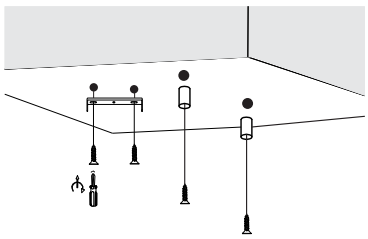


Apply screws

6

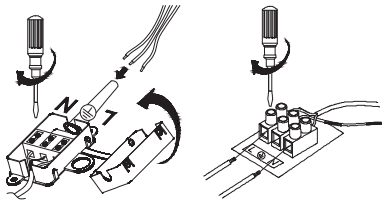


Connect the wires

7

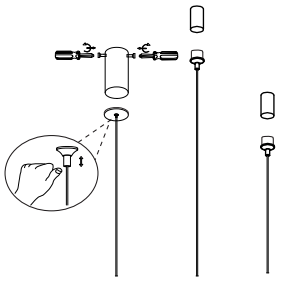


Apply side screws and make hanging elements stable

8

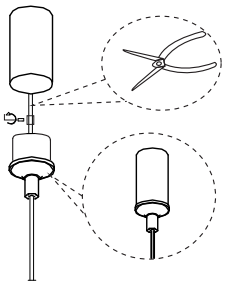


Adjust the wire & fix it into place

9

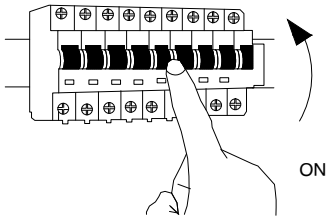

Turn on the general switch

9

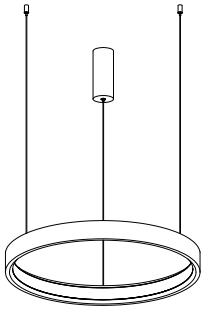

www.novaluce.com