
NOVA LUCE


9345638

1

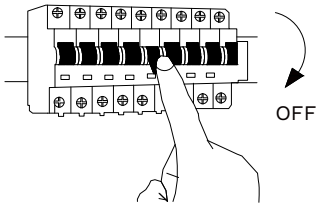


Turn off the general switch

2

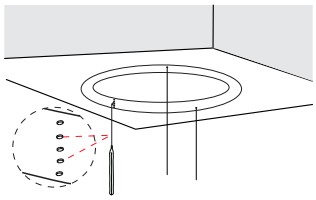


Mark where to drill

3

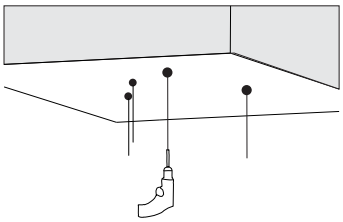


Drill holes on the marked areas

4

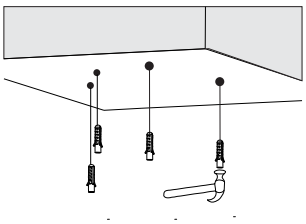


Apply plastic anchors

5

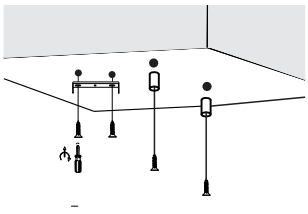


Apply screws

6

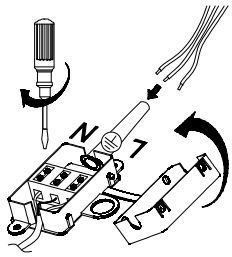


Connect the wires

7

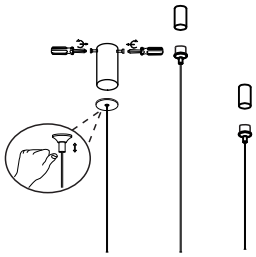


Adjust the wire

8

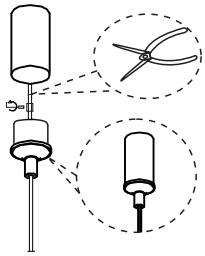


Cut the access

9

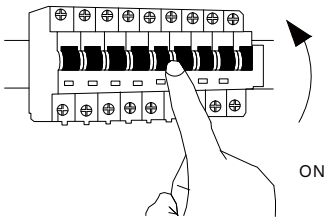

Turn on the general switch

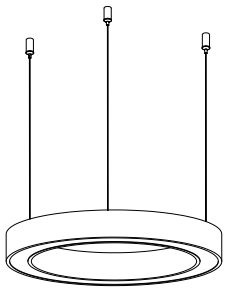

www.novaluce.com