


NOVA LUCE


9345638, 9345639, 9345640,
9345641, 9345642, 9345643,
9345644, 9345645, 9345646

1

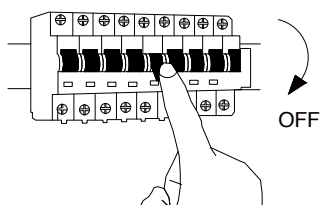


Turn off the general switch

2

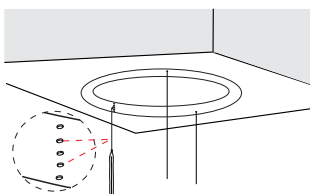


Mark where to drill

3

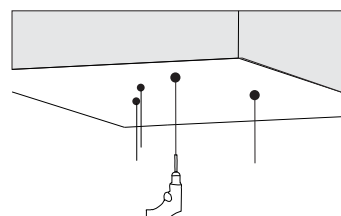


Drill holes on the marked areas

4

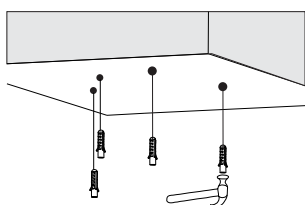


Apply plastic anchors

5

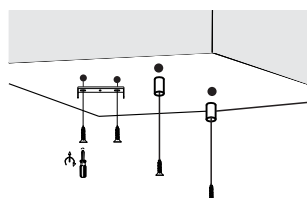


Apply screws

6

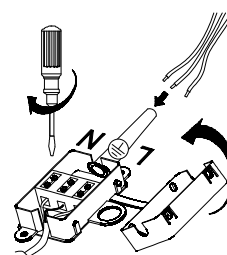


Connect the wires

7

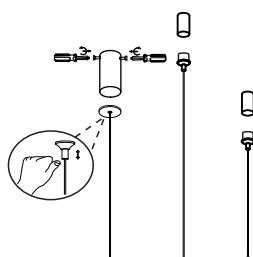


Adjust the wire

8

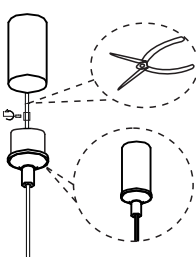

Cut the access

9

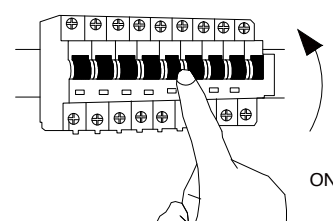

Turn on the general switch

