



1

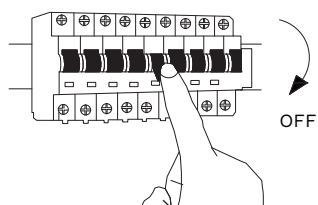


Turn off the general switch

2

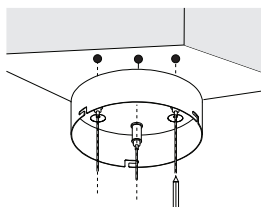


Mark the areas to drill

3

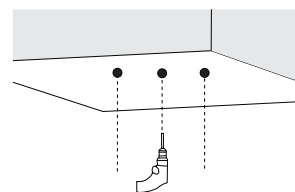


Drill holes on the marked areas

4

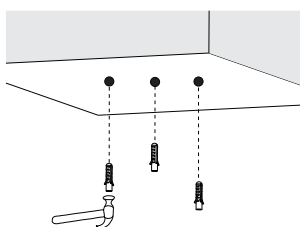


Apply plastic anchors

5

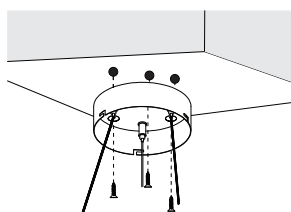


Apply screws

6

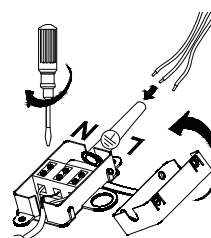


Connect the wires

7

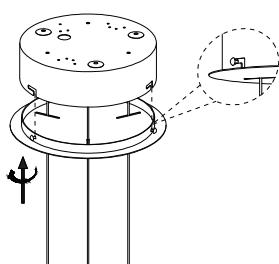


Put the canopy in place

8

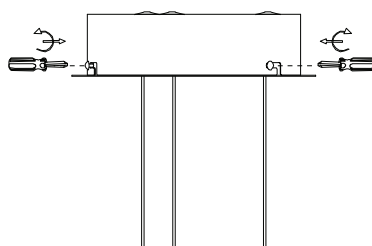

Apply the side screws

9

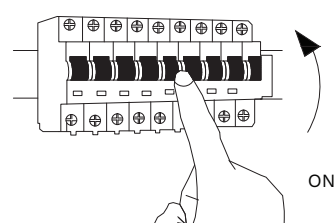

Turn on the general switch

