




Turn off the general switch

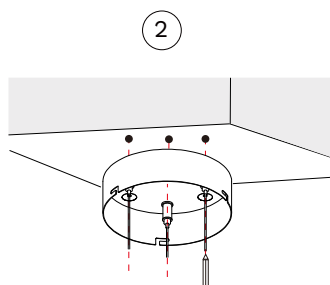


Mark where to drill holes

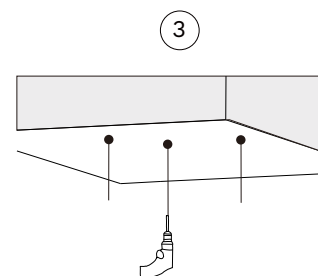


Drill on the marked areas

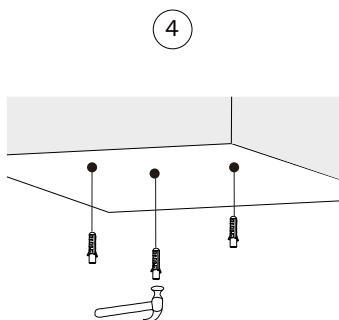

Apply plastic anchors

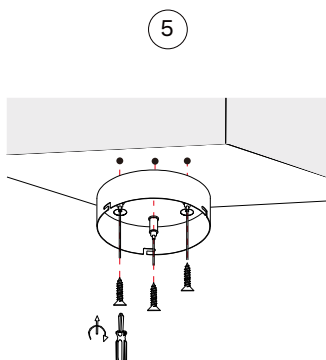

Apply screws

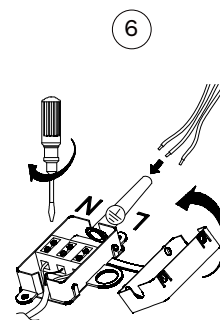


Connect the wires

7


CCT SWITCH

Color temperature switch




Warning: Please not change color when power on

8

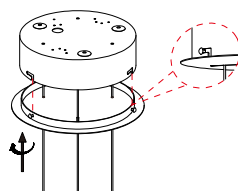


By rotating combine them together

9

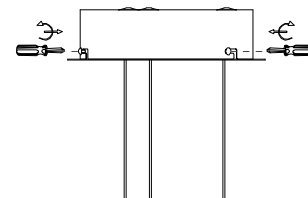

Apply the side screws to make it stable

10

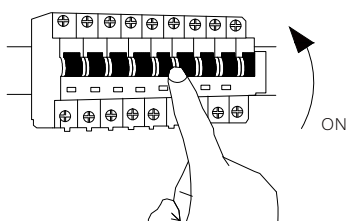

Turn on the general switch

