




1. Turn off the general switch

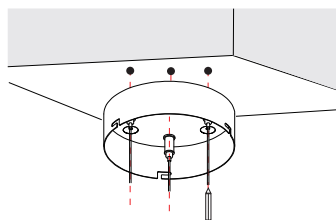


2. Mark where to drill holes

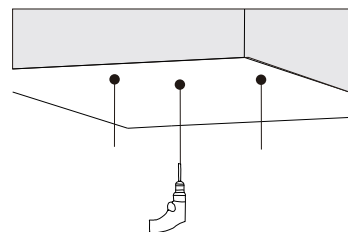


3. Drill on the marked areas

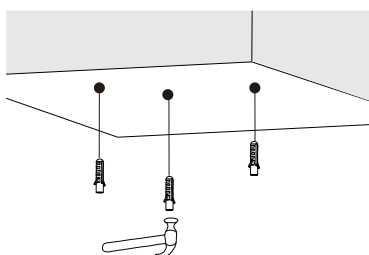

4. Apply plastic anchors

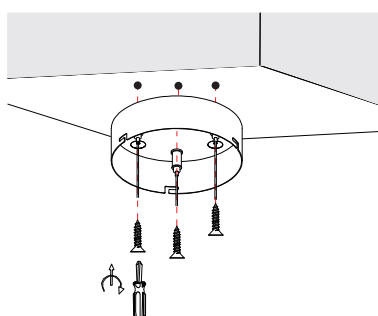




5. Apply screws

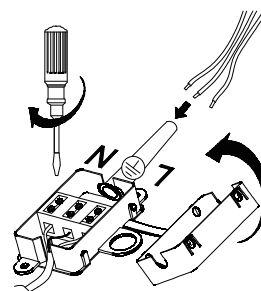

6. Connect the wires

CCT SWITCH

Color temperature switch

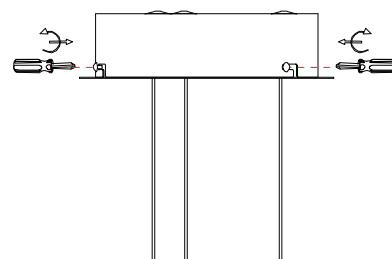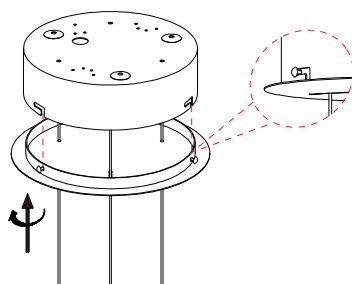


Warning:

7. Please not to change color when power on.

8. By rotating, combine them together.

9. Apply the side screws to make it stable.

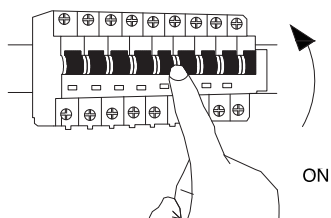

10. Turn on the general switch

