


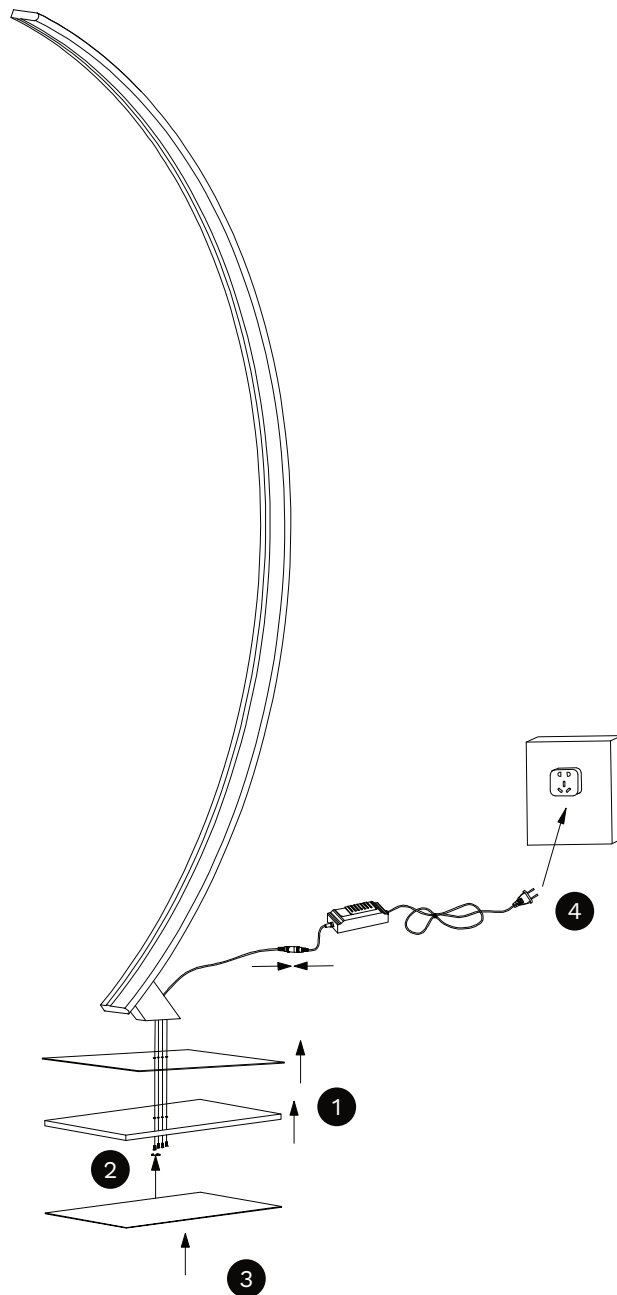

1. Enable it
2. Apply the screws

3. Apply the bottom part
4. Plug it in

