



1

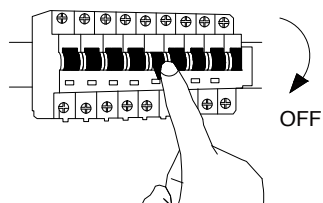


Turn off the general switch

2

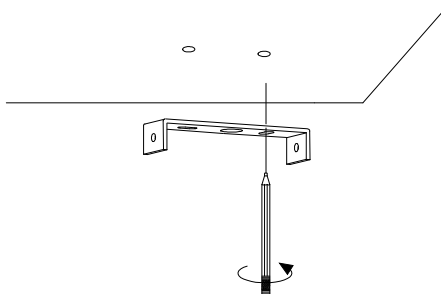


Mark where to drill holes

3

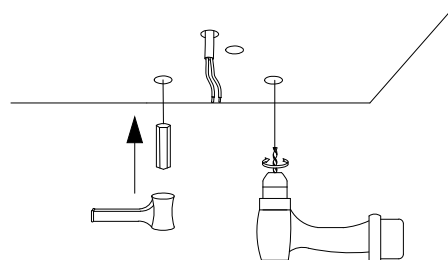

Apply plastic anchors

4

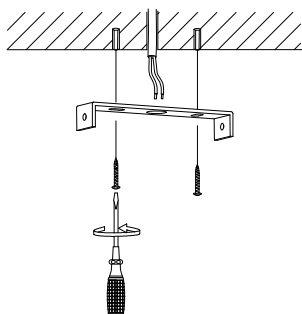

Apply screws

5

CCT switch in canopy

2700K 3000K 4000K



2700K 3000K 4000K




2700K 3000K 4000K




Choose the color temperature

6

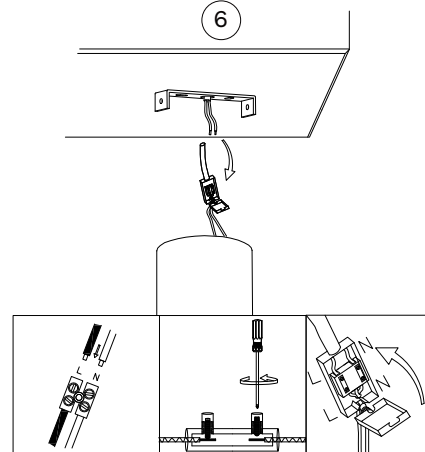


Connect the wires

7

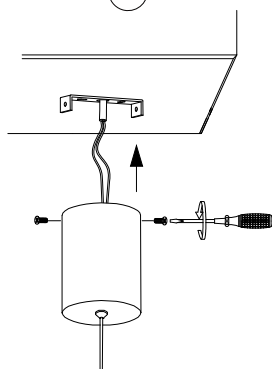

Apply side screws

8

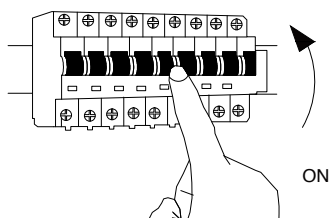

Turn on the general switch

