


ATTENTION: FOR THIS OPERATION YOU HAVE TO CUT OFF THE POWER

MAXIMUM


48V DC

NOVA LUCE


Step:1

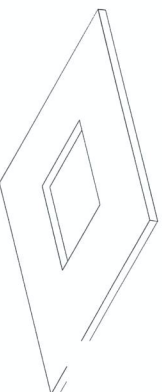

Cut out

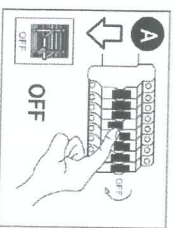


Step:4

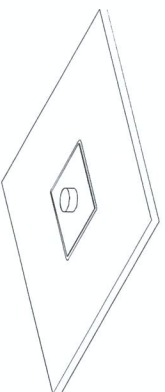


Fill up the wall cracks before plastering the pass.


Step:2

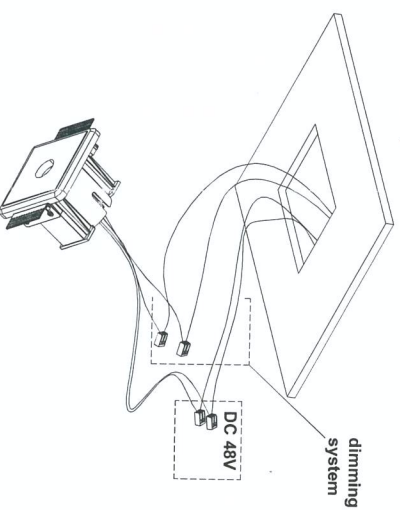


Step:5

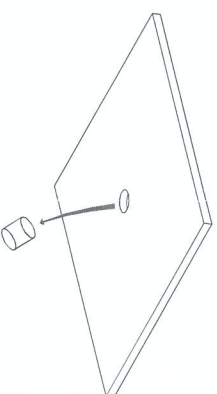


Step:3

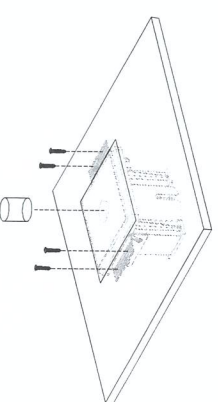

Step:6

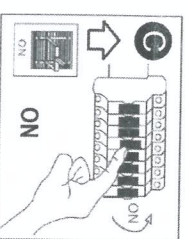

Finish

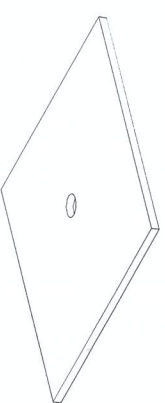

9492800

