
NOVA LUCE


9492888

1

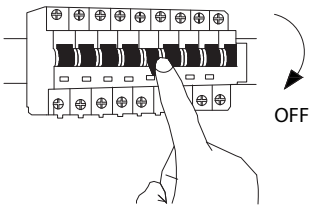


Turn off the general switch

2

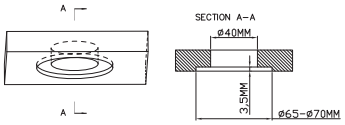


Make a cutout

3

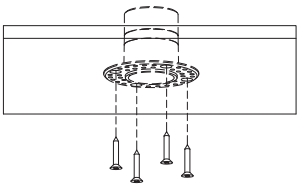


Apply screws

4

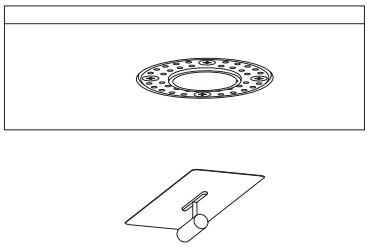


Apply putty powder

5

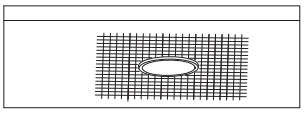


Apply fiberglass mesh fabric

6

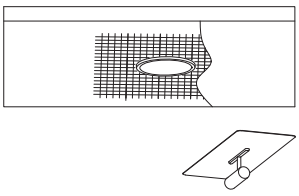


Apply putty powder

7

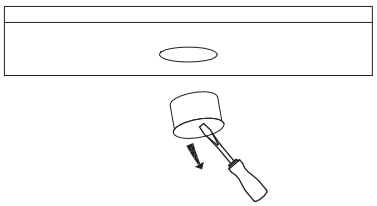

After curing, pierce the film, remove
The plug, finish installation

8

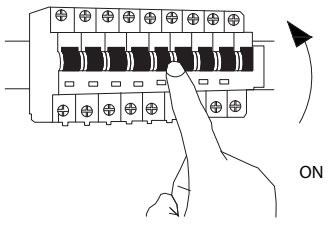

Turn on the general switch

