
NOVA LUCE


9511020

1

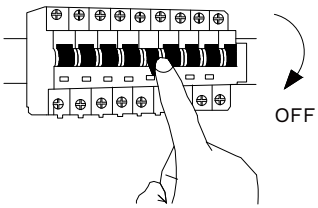


Turn off the general switch

2

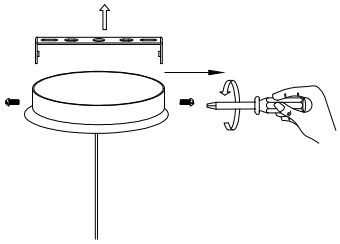


Unscrew the screws

3

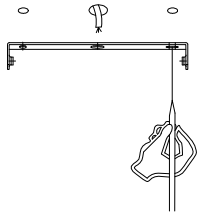


Align & mark where to drill holes

4

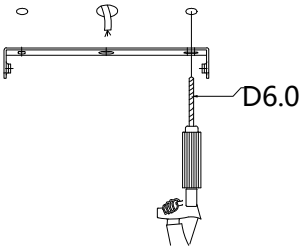


Drill holes

5

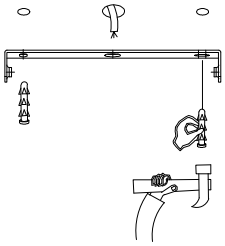


Apply plastic anchors & screws

6

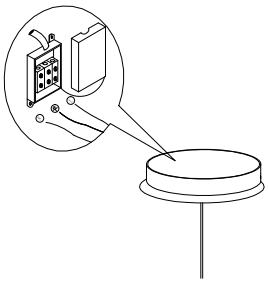


Connect the wires

7

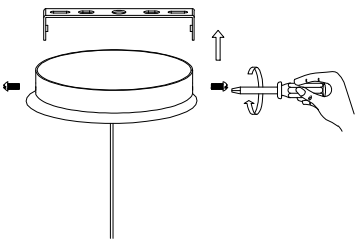


Apply side screws

8

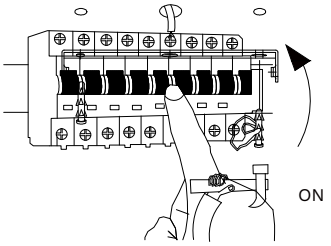

Turn on the general switch

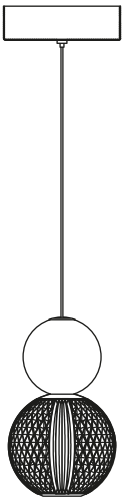

www.novaluce.com